

2209 Kellen Gross Dr., Yankton SD 57078

Phone: 1-877-TRUXEDO (1-877-878-9336) Fax: (605) 664-9304

Web Site: http://www.truxedo.com

P/N 1116967 Rev. T

IFETIME WARRA

TruXedo warrants that all new, unused products are free from defects in material and workmanship. This Warranty is effective if the product is properly installed and used for the purpose intended for the life of the product. It applies to the original buyer only. TruXedo's obligation under this Warranty is limited to repairing, or at its option, replacing any part that is returned, transportation prepaid, to TruXedo, Yankton, South Dakota, if the product is, in our judgment, defective. All materials must be accompanied by an RMA (Returned Material Authorization) number requested by and authorized in advance of returning the materials. TruXedo shall not be liable or responsible to supply or pay labor to replace any part found defective, nor shall it be liable for any damages of any kind or nature to person, product, or property.

There are no Warranties for used products or products that have been repaired, altered, modified, subjected to misuse, negligence, accident or ordinary wear and tear. Limitations may apply to logo screen printing. Call 1-877-878-9336 for complete details.

TruXedo products are sold without any express warranty except as set forth above. TruXedo is not obligated to honor warranty claims if Genuine TruXedo parts are not utilized.

DIRECT ALL WARRANTY CLAIMS TO TRUXEDO AT 1-877-878-9336

Register online at www.truxedo.com or mail this form to: TruXedo, P.O. Box 1078, Yankton, SD 57078-1078		
Name:		Product Purchased:
Address:		☐ Original TruXedo☐ TruXedo Lo Pro Q1
	State:Zip:	
Phone Number:		_ □ TruXedoPlus
Email Address:		□ TruXport
Date Purchased:	Price Paid:	□ TruXedo Deuce
Dealer Name:		□ TonneauTraX
Pickup Make:		☐ ☐ TonneauMate
Model:	Year:	□ Edge

OWNER/USER RESPONSIBILITIES

It is the responsibility of the owner/user to read this manual and comply with the operating procedures. The owner/user is also responsible for inspecting the TruXedo® cover, and for having parts repaired or replaced when worn or damaged.

Failure to follow safety instructions and warning labels could result in failure of your cover system and/or personal injury.

MESSAGES TO INSTALLER


- Always wear safety glasses and/or other necessary protective equipment when installing your TruXedo®.
- These instructions are complete for most pickup models. Additional instructions are included, if required for your truck. Please read entire manual before installing your TruXedo®.

COVER MAINTENANCE

Vinyl cover can be hand washed with mild soap and water or cleaned in a car wash. Thoroughly rinse cover to remove any soap residue. Cover can be treated with any vinyl protectant made for tonneau covers. **Never** use silicon, petroleum, or citrus based products on your tonneau cover.


SAFETY INSTRUCTIONS

- Do not place objects on or against cover or framework.
- Do not tie cargo to TruXedo® framework.
- Never allow children or pets to occupy pickup box while cover is closed.
- Cover is not airtight. Special care is required to keep cargo clean and dry.
- Fabric cover won't prevent theft of contents inside truck box.
- Cover must be rolled fully open and secured with safety straps when towing vehicle backwards.

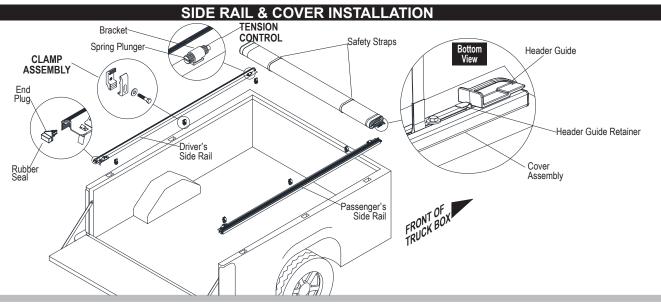

OUTWARD TILT

STEP 1: Attach the TruXedo rails to the truck's vertical inside flange as shown in Detail A. To get the correct TruXedo rail alignment from front to back, See Detail-B. Compress the rear D-seal against the closed tailgate and hold. Attach clamps starting at the tailgate. Evenly space 3 clamps along each TruXedo rail, leaving approximately 8" on each end.

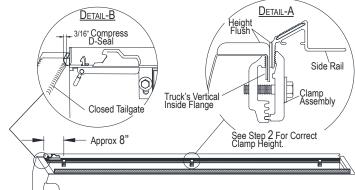


STEP 2: For optimum latching performance and cover fit, side rails must be level. To adjust rails, loosen screws and reposition male clamps higher or lower. Tighten all clamps.

WARNING Tighten clamps securely on side rails before driving vehicle.

LEVEL


INWARD TILT

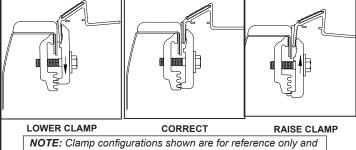


NOTE: Clamp configurations shown are for reference only a are not intended to be standard for all pickups.

STEP 3: Set cover assembly behind cab with header seal on top of of bulkhead. See detail C.

STEP 4: Push header guides into place under side rail. A **click** sound will indicate a secure attachment. See detail D & E below.

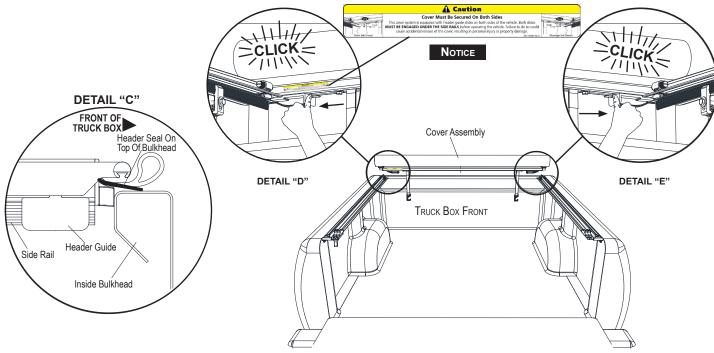

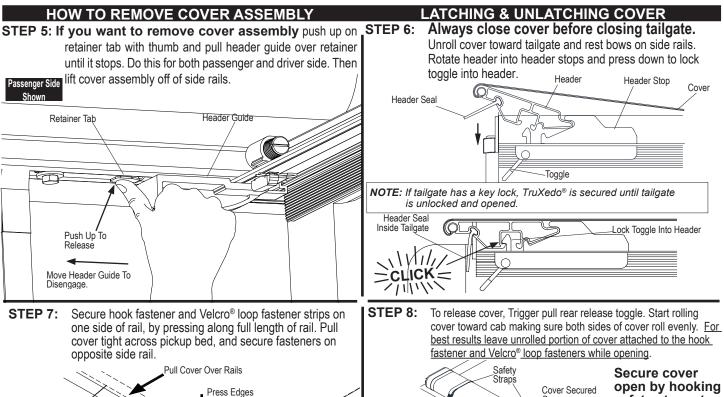

Toggle

Cover Secured front loops.

Secure cover open by hooking safety straps to

Lock Toggle Into Header


Header Stop

Cover

COVER TENSION ADJUSTMENT Front Header EVER-TITE™ **AUTOMATIC** TENSION CONTROL Spring Plunger Side Rail

- Spring plunger compensates for material expansion & contraction caused by temperature changes.
 - Check cover tension after installation, seasonally, and after extreme temperature changes.
 - · For best performance, adjust tension regularly to protect your cover against wind wear.

Set tension during warmest part of day. With cover closed, release hook and loop fastener from both side rails near cab. Check STEP 9: compression of both spring plungers against the front header per diagram. Roll cover open and make adjustments. Close cover and re-check adjustment. Repeat until satisfactory tension has been achieved.

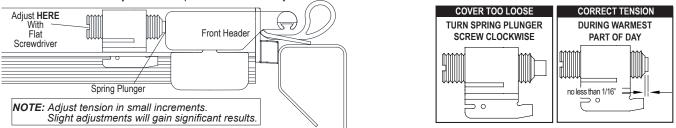

Questions?

Hook and Loop

NOTE: Secure hook fastener and Velcro®

loop fastener along entire length of both side rails before driving vehicle. This will prevent wind lifting

the cover and causing damage.

Fastener

Call our friendly customer service staff at TruXedo Toll Free:

1-877-878-9336 Mon - Fri 8 am - 5 pm CST

HEADER WILL NOT LATCH:

Check side rails to make sure they are level. See Step 2.

TROUBLE SHOOTING


Make sure the header seal is not caught between side rail & header.

Check position of side rails on pickup box, they may be positioned too low. See Step 1.

Make sure cover has proper tension. See Step 9.

FABRIC COVER IS TOO TIGHT OR TOO LOOSE: See Step 9 to adjust tension.

* VELCRO® is a registered trademark of the Velcro companies.

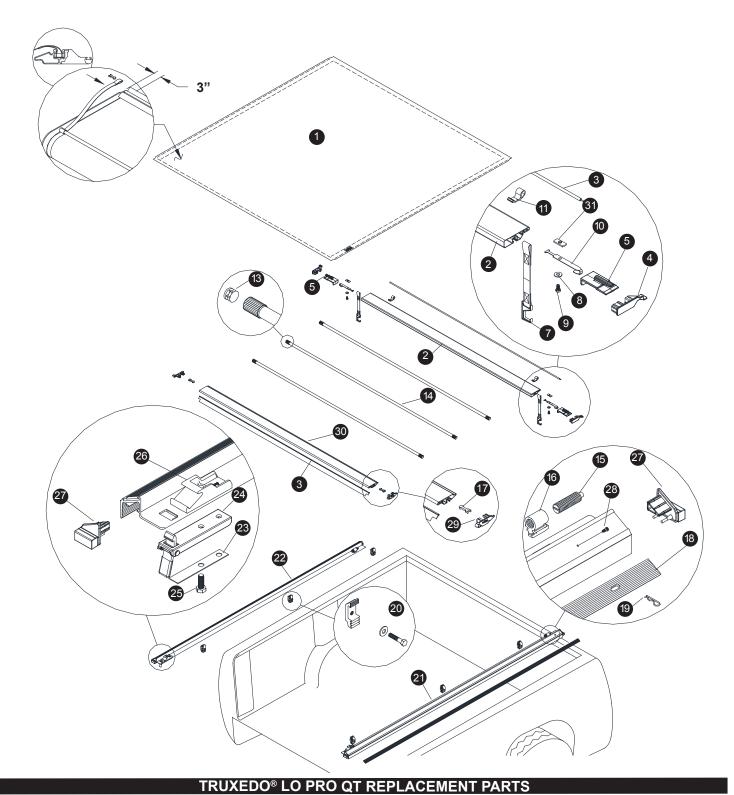

21 Side Rail, Passenger's Side TruXedo® Lo Pro QT Replacement Cover 11 1704715 Extruded Retainer Loop 22 Side Rail, Driver's Side Black Front Header 12 _ **23** 1114773 Flat Spring, 5/8" x 3 7/8" 3 Header Seal, Notched **13** 1705052 End Plug, 1" OD 1117540 **24** 1704213 Latch Assembled 4 Front Header 08 End Plugs (Set of Two) Black Bow 14 1704604 **25** 1702926 Cap Screw, 5/16" x 7/8" 5 Header Guide_QT **15** 1702992 Spring Plunger, 5/8" x 2.15" **26** 1704187 Header Stop Tension Control Bracket 6 **16** 1703260 Side Rail End Plugs w/Seal (Set of Two) **27** 1115373 7 Safety Strap **17** 1115354 Header Insert Safety Clip 28 1704383 Filister Head Screw 1700428 Washer Flat 5/16" 8 18 Hook and Loop Fasteners **29** 1117467 Rear Header 08 End Plugs (Set of Two) 1704606 Cap Screw, 5/16-18 x 5/8" 9 **19** 1703332 Hitch Pin, 1/16" x 1 5/16" 30 Black Rear Header **10** 1117591 Header Guide Retainer. 20 1115191 Aluminum Clamp Assy 31 1704194 Weld Nut 5/16-18 ZP

^{*} Please specify length or make and model of vehicle.