





ATTENTION!


**Failure to align Cap and Starter Cable can cause module failure.
Please read carefully.**

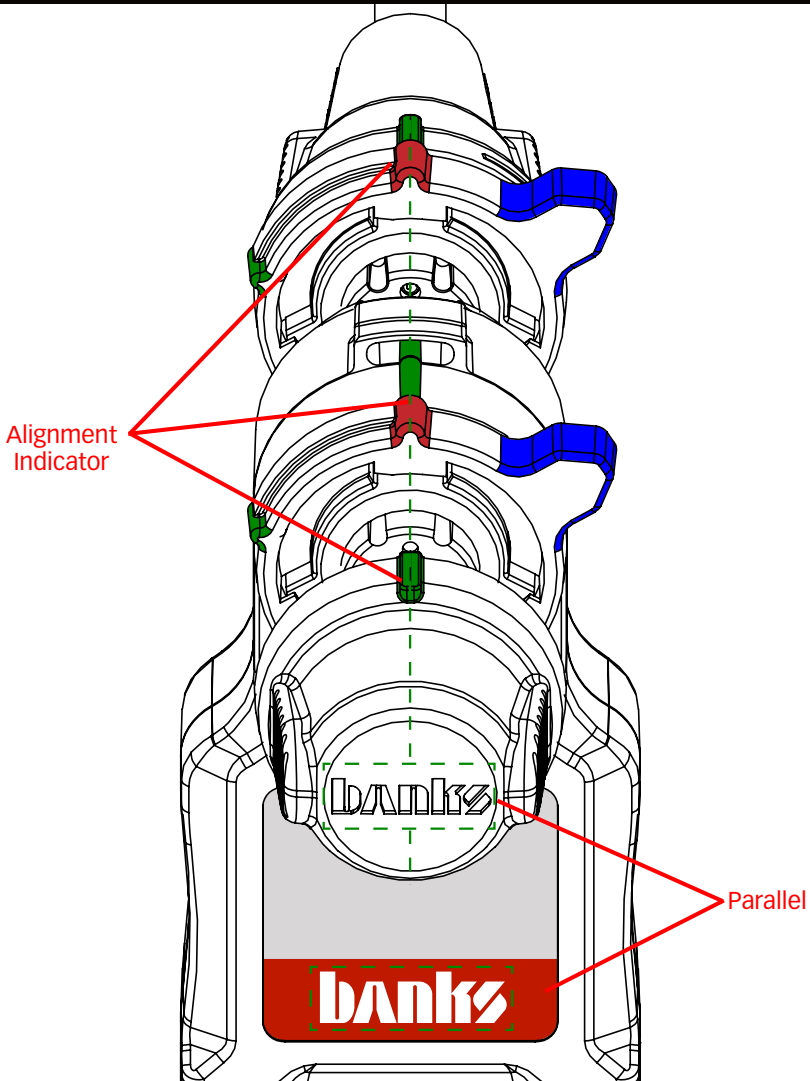

1. Ensure the OBDII Cable is not plugged into the OBDII port.
2. Rotate the Locking Tab(s) counter clockwise to the unlocked position.

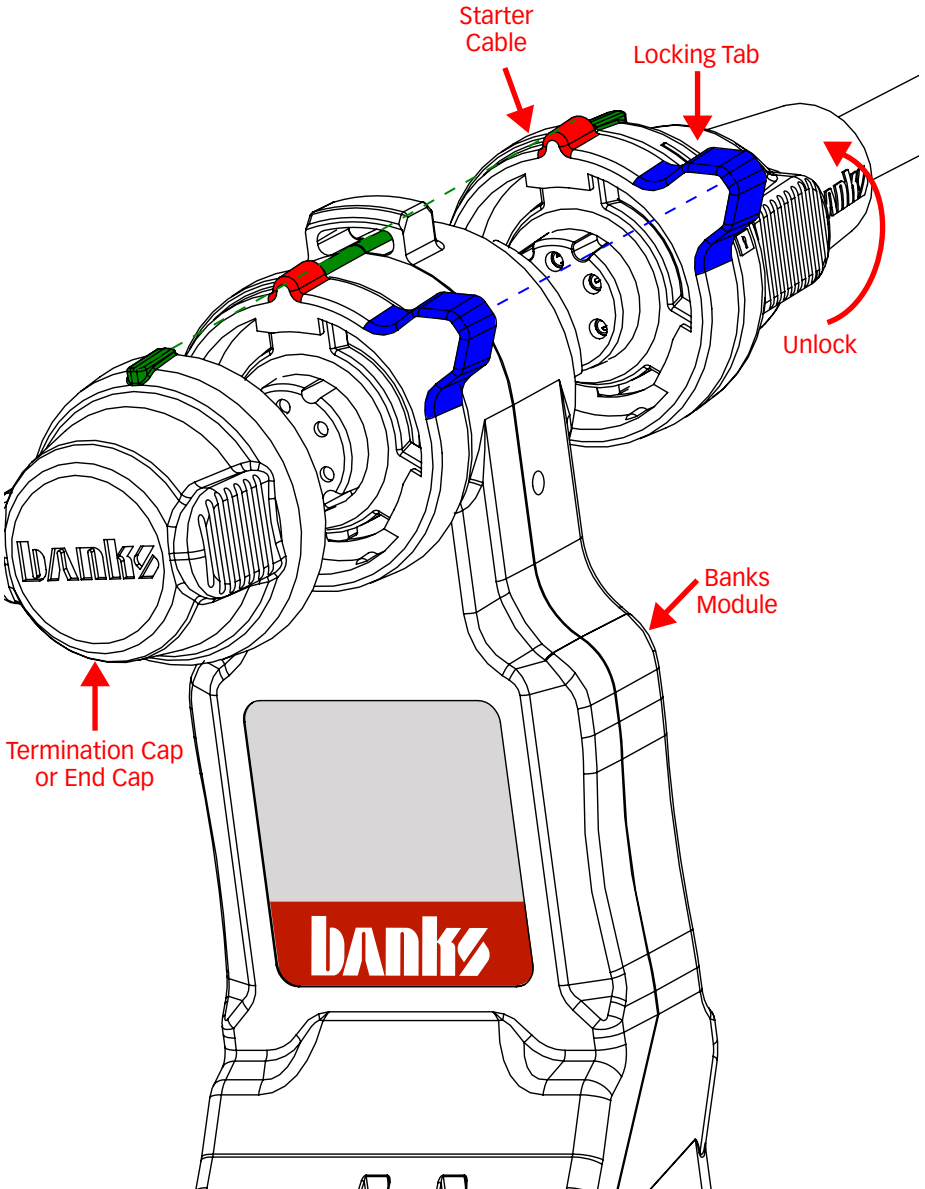

3. The "Banks" logo on the Terminator/End Cap should be parallel with the "Banks" logo on the module below for proper alignment. Position all alignment indicators at the 12 o'clock position.
4. Rotate Locking Tabs clockwise to lock modules.

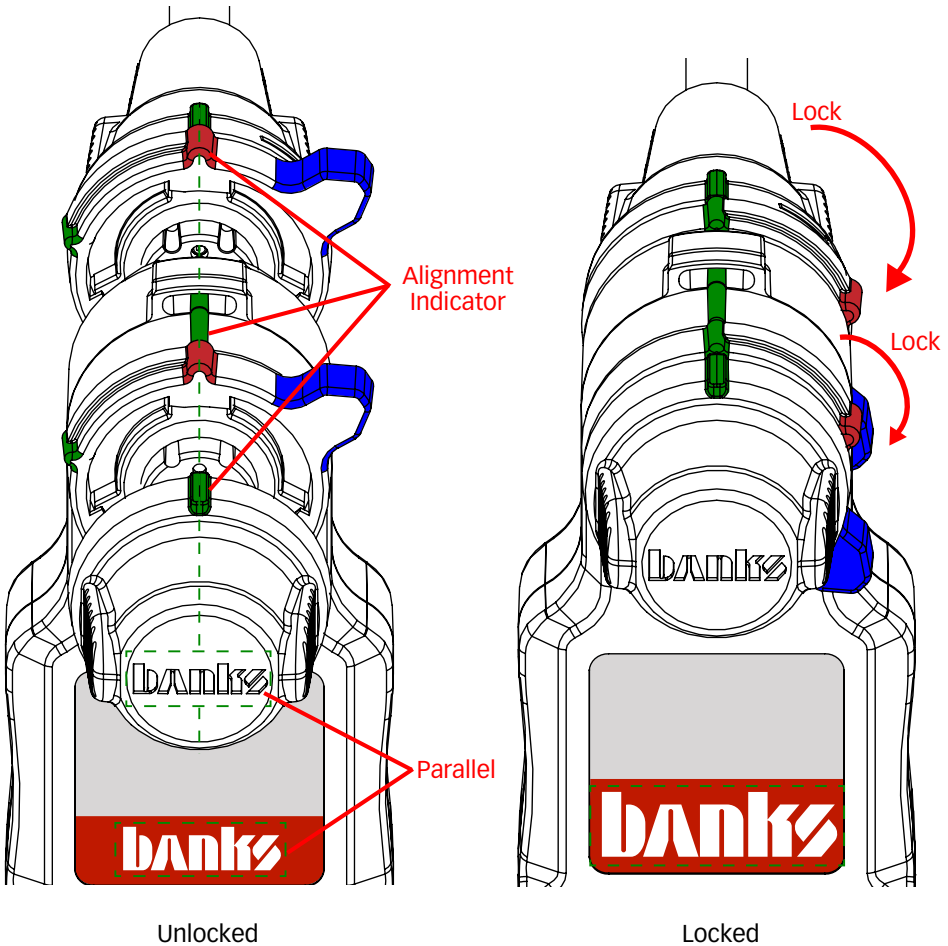



Gale Banks Engineering
546 Duggan Avenue • Azusa, ca 91702
(626) 969-9600 • Fax (626) 334-1743

Product Information & Sales: (888) 635-4565
Customer Support: (888) 839-5600
Installation Support: (888) 839-2700

bankspower.com