




HOW TO OBTAIN YOUR AUTH CODE AND SERIAL NUMBER FROM YOUR EFI LIVE AUTOCAL


STEP 1

OPEN UP YOUR EFI LIVE SCAN AND TUNE.
SELECT **F7: LICENSES**

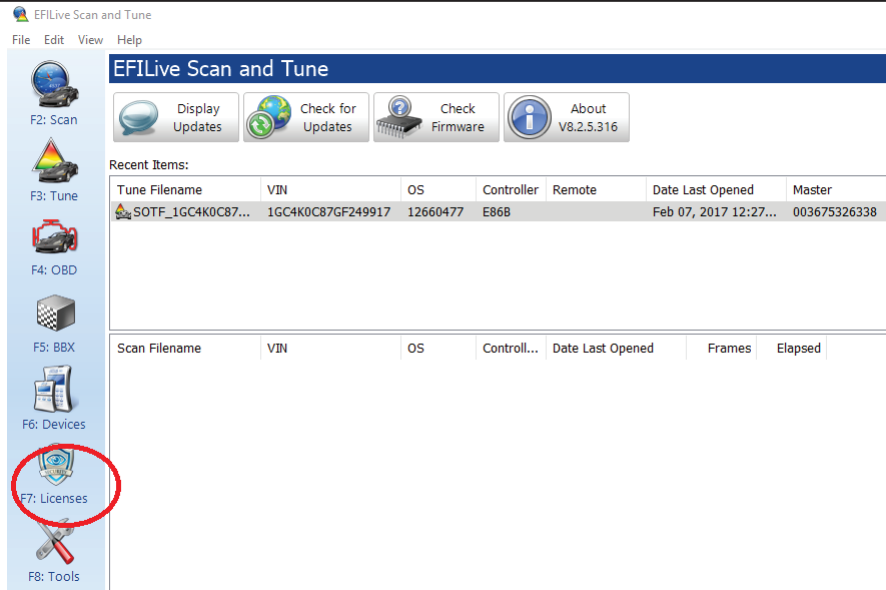

STEP 2

SELECT **F3: VINS**

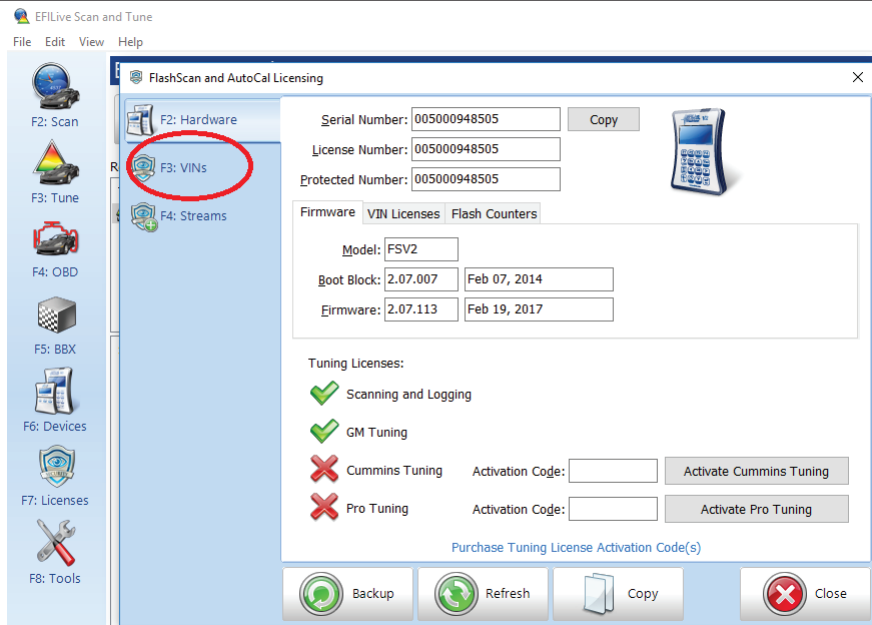

STEP 3

LEFT CLICK ON YOUR MOUSE ON:
COPY SERIAL AND AUTH CODE.
(IT WILL AUTOMATICALLY
SAVE THE INFORMATION)

RIGHT CLICK AND PASTE
IT TO YOUR EMAIL TO:

BARRY@GDPTUNING.COM

