


Installation Instructions

K4338A

2003-2007 Ford 6.0L F250-F350 Cat Back 4"

Tools needed: 9/16" end wrench or socket, 7/16" deep socket, hacksaw or sawzall, aerosol lubricant.

(If your vehicle is equipped with a catalytic converter, it is unlawful to remove.)

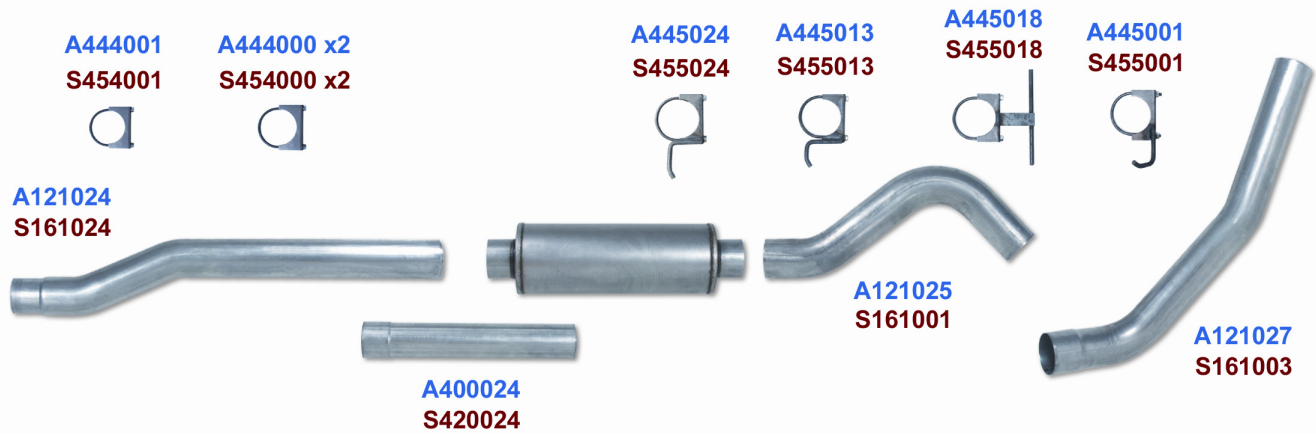

A = ALUMINIZED S = STAINLESS STEEL

Removal of Original System

- 1) Start under the vehicle. Remove the band clamp that holds the stock system to the converter by loosening the bolt and prying the clamp loose. Do not cut when installing on longer models.
- 2) Cut the original system just behind the muffler.
- 3) Spray the stock hangers with aerosol lube and pry rubber mounts from the system. Leave the rubber mounts attached to the truck for re-use.
- 4) Remove the old system.

Installation of New Performance System

(Hint: Do not fully tighten any clamps until the complete system is installed and aligned.)

- 1) From under the truck, install the intermediate pipe with clamp to the stock catalytic converter.
- 2) Hang the muffler in the stock location using the hanger clamp on the outlet. This determines the placement of the rest of the system.
- 3) Install the first tail pipe into the outlet of the muffler using the hanger clamp already installed. Rotate the pipe as needed to pass next to the shock absorber and over the rear axle.
- 4) Install the second tail pipe into the outlet of the first tail pipe with a clamp. Rotate as needed to level the outlet behind the rear tire. Attach the hanger clamp in the stock location.
- 5) Measure between the outlet of the adapter and the inlet of the muffler. Add 5" to this measurement for the slip-joints and cut the intermediate pipe to fit. Install the cut pipe between the intermediate pipe and the muffler with a clamp at front and a clamp on the muffler inlet. Install the hanger clamp in the stock location near the front of the intermediate pipe and install the hanger clamp in the stock location near the rear of the intermediate pipe.
- 6) Starting at the converter, align and tighten all the pipes and clamps. Start the engine and check for leaks.