



Installation Instructions

PowerBoard® NX

Automatic Retracting Running Board

Patent Pending

Vehicle Application

- Dodge Ram Quad Cab 1500
2002 - 2008
Part Number: 75601-15
- Dodge Ram Quad Cab 2500 / 3500 / HD
2003 - 2009
Part Number: 75601-15

- Dodge Ram Mega Cab
2006 - 2009
Part Number: 75618-15

www.Bestop.com - We're here to help! Visit our web site and click on "[Ask a Question](#)". Click here for more [Truck Accessories by Bestop](#).

INSTALLATION TIME



3 Hours

SKILL LEVEL



3 - Moderately Difficult

TOOLS



Tape Measure




Flat-Head
Screwdriver



Phillips
Screwdriver



Power Drill
1/8" Drill Bits



Wrench
13 mm




Crimp
Tool




Paint



Allen
Wrench
5mm



Rivet Gun
50/50
Solution
Alcohol/Water



Torque
Wrench



Safety
Glasses



WARNING The manufacturer strongly recommends that this product be professionally installed.



WARNING Failure to carefully follow the electrical installation steps could result in severe electrical shock which could harm the installer and/or damage the vehicle.




WARNING Do not rely in any way on the components of this product to protect against injury or death in the event of an accident. Never operate the vehicle in excess of manufacturer's specifications.

WEAR SEAT BELTS AT ALL TIMES

Read and follow, precisely, all installation instructions provided when installing product. Failure to do so may result in a poor fit and could place occupants of the vehicle in a potentially dangerous situation.

PowerBoard® NX – Installation Instructions

Parts List and Hardware Identification

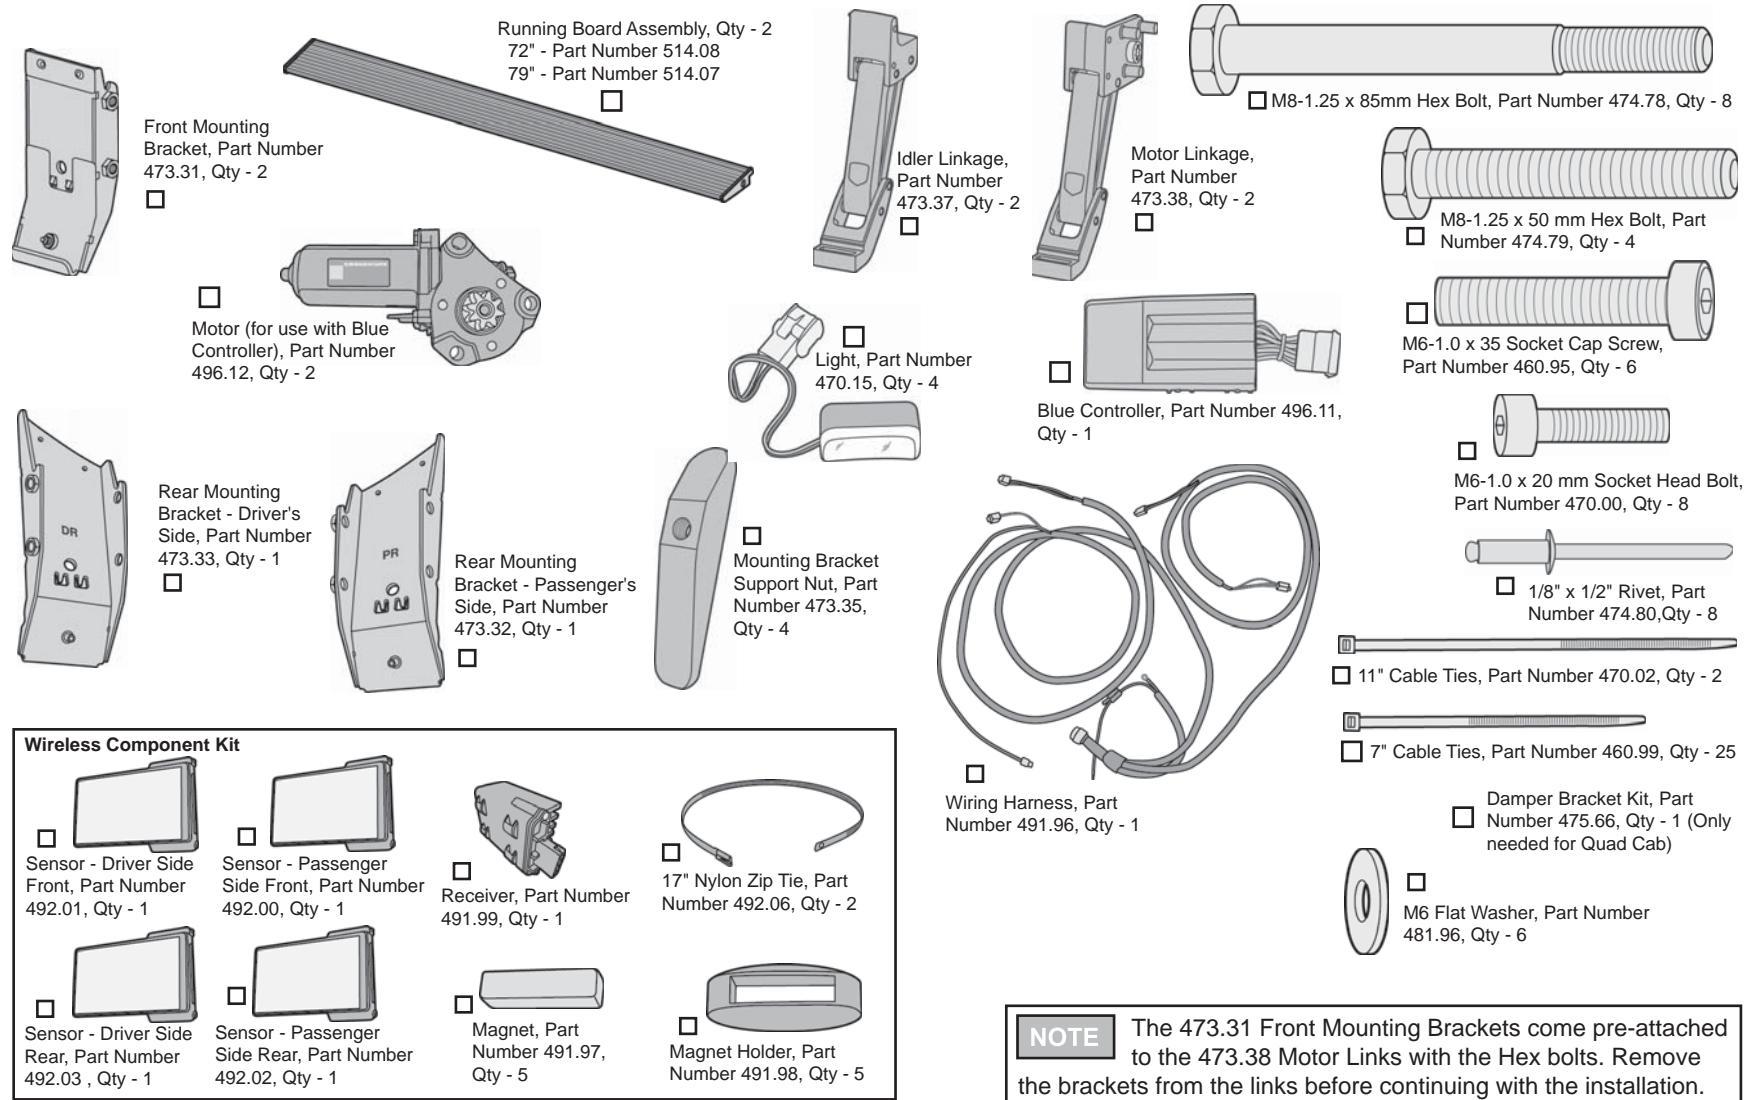


PowerBoard® NX – Installation Instructions

RF System Overview

The PowerBoards® are activated by Sensors that are to be mounted inside the door openings for each door. The Sensors are off when a magnet is next to the Sensor end that has the two screws. The Sensor triggers the PowerBoards® to deploy when the magnet is moved about 3 inches away from the Sensor. The magnet can work in either of the locations shown to signal the PowerBoards® to retract.

Be sure to mount the Sensors in a location that will allow removal of the screws for battery replacement. See Battery Replacement at the end of the instructions.


See Steps 18 – 24 for detailed instructions.

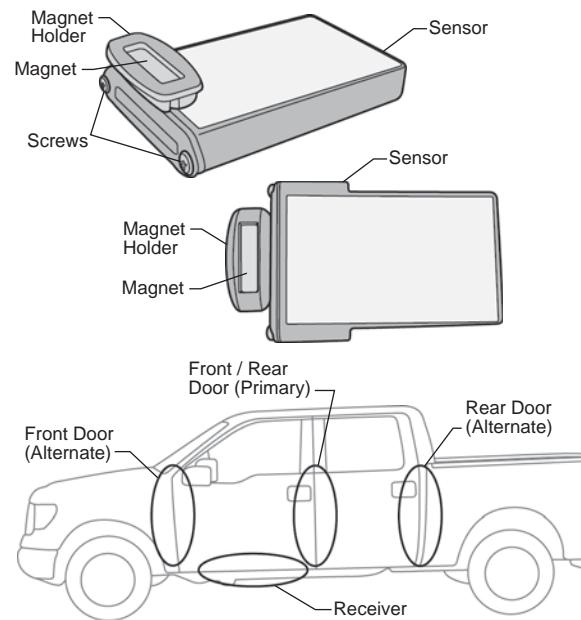

1 System Initialization

- a. Remove fuse from the PowerBoard® wire harness and connect the red lead to the battery positive and the black lead to negative.
- b. Layout the harness so the long leg crosses the engine compartment towards the passenger side and the short leg is on the driver side.
- c. Attach a motor to each motor link with 3 M6-1.0 x 35mm Socket Cap Screws.
- d. Plug the Controller, Receiver, Motors and Lights into the harness.
- e. Plug the fuse back into the harness. After a one second delay the linkages will retract as shown.
- f. Lay out all four sensors as they would be installed on the vehicle with the drivers side to your left and the passengers side to your right. Place a magnet next to each sensor as shown in the overview above.
- g. Move the magnet more than 4 inches away from the driver front sensor. All four lights will come on and the drivers side linkage will deploy.
- h. Move the magnet back to the sensor and after a three second delay the lights will turn off and the linkage will retract.
- i. Repeat with the remaining sensors and the lights and corresponding linkage will operate in the same manner.
- j. Remove the motors to continue with the installation.

If the system does not operate as stated above see the Troubleshooting and Battery Replacement sections at the end of the instructions or go to our web site at <http://www.bestop.com/support>.

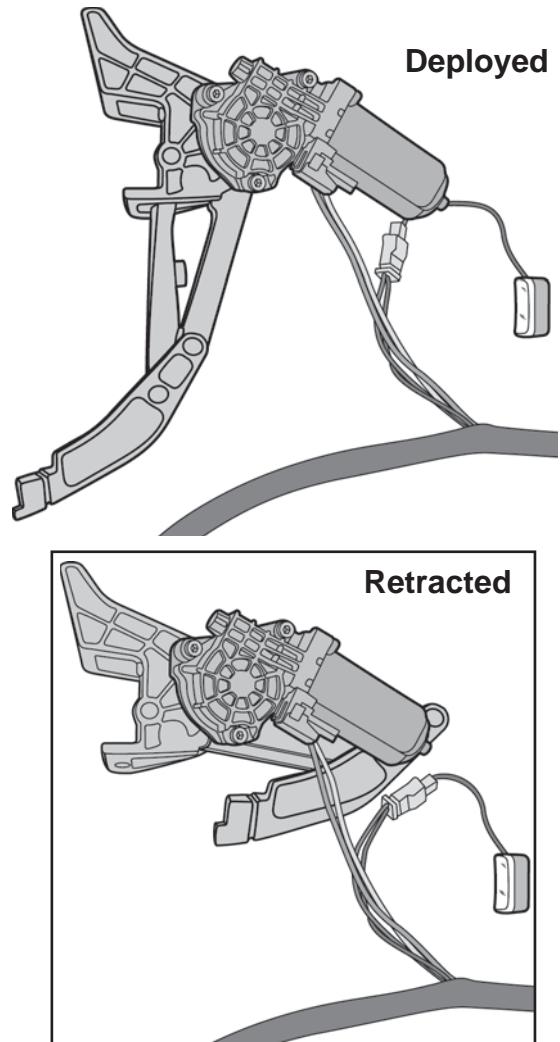


PowerBoard® NX – Installation Instructions

NOTE Quad Cab Only -

Before beginning this installation, follow the instructions in the Damper Bracket Kit to relocate the dampers on 1500 Quad Cabs.

2 Remove Plugs - Driver's Side


Counting from the front, locate the third (3rd) and seventh (7th) plugs on the inner sill for a Quad Cab. For a Mega Cab locate the third (3rd) and eighth (8th) plugs. Use a flat screwdriver to pry them out.

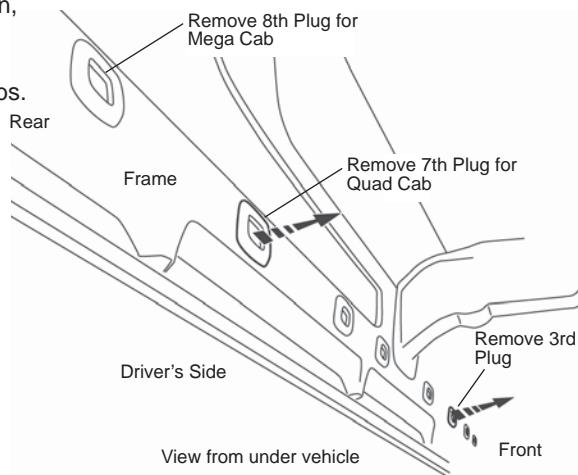

4 Install Rear Mounting Bracket Assembly - Driver's Side

Slide the Support Nut on the Rear Mounting Bracket Assembly into the rear hole where the plug was removed. Hook the tabs on the bracket over the edge of the hole to help secure the bracket to the frame. Pull back on the Hex Bolt to snug the nut and bracket up to each other and use a 13mm wrench to tighten the bolt to 16 ft./lbs. (22 Nm).


NOTE Make sure that the two tabs in the bracket rest on the edge of the hole in the sheet metal.

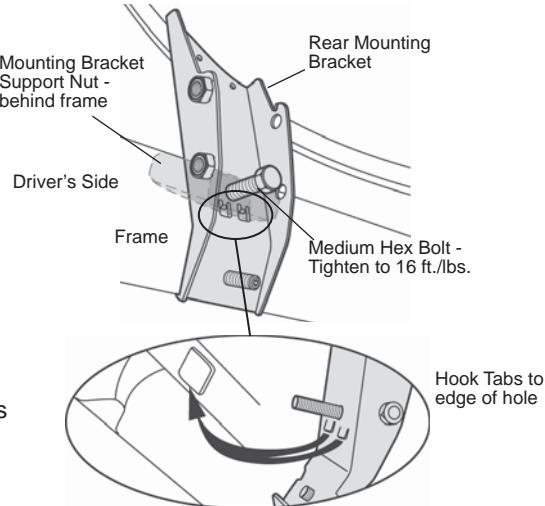

3 Assemble Rear Mounting Bracket Assembly - Driver's Side

Locate the Rear Mounting Brackets and the Mounting Bracket Support Nuts in the parts kit. Use a Medium Hex Bolt to attach a Support Nut to the back of the Rear Mounting Bracket..


NOTE If you have a Mega Cab, remove the tape and cut as indicated for the Mega Cab Rear Bracket, if necessary

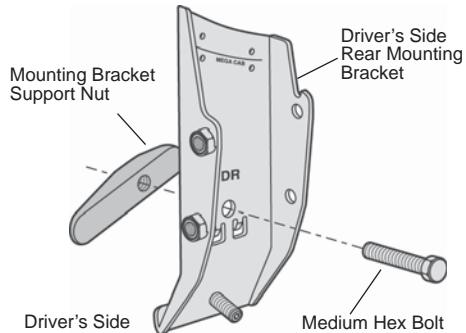

5 Install Rear Mounting Bracket Assembly - Driver's Side

Use the two small holes in the Rear Mounting Bracket as templates to drill two 1/8" holes. Paint the edges of the holes with Corrosion Protection Paint to prevent rust. Install a Rivet in each hole. Use a 1/8" Allen Wrench to tighten the set screw on the bracket to 1.5 ft./lbs. (2 Nm).


NOTE Make sure the bracket is flush with the inner sill before riveting.

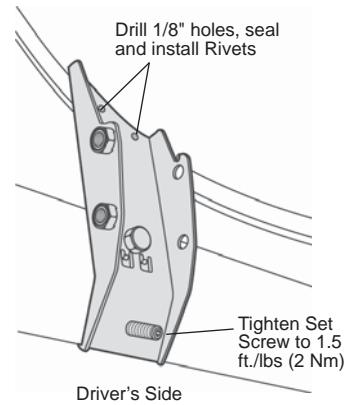

PowerBoard® NX – Installation Instructions


6 Install Front Mounting Brackets

Repeat Steps 1-4 with the Front Mounting Bracket.

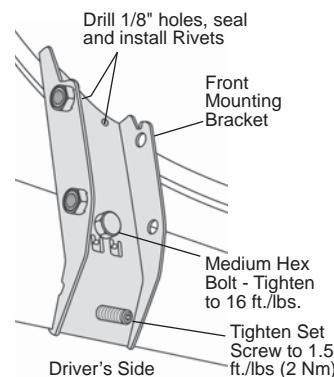


7 Install Arms - Driver's Side

Orient the Front and Rear Arms to the brackets so the platform faces outside the vehicle to support the Step. Install the arms in the brackets with two Large Hex Bolts for each arm. Tighten the bolts to 16 ft./lbs. (22 Nm).

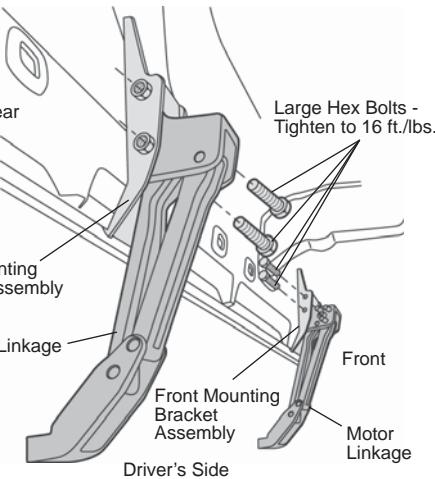


8 Install Passenger's Side Brackets and Arms

Repeat Steps 1-6 on the passenger side.

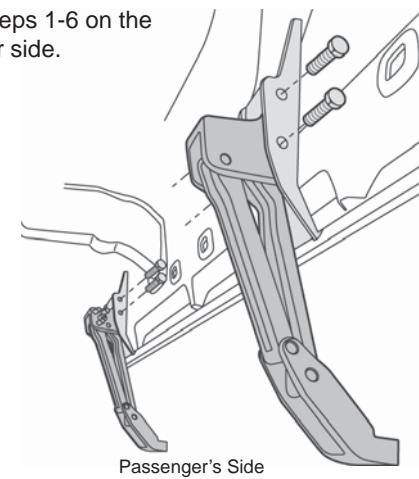

9 Install Controller and Wiring Harness

Loosely wrap 11" Cable Ties around harness in engine compartment. Slide the Controller through the Cable Ties and tighten. Attach the Wiring Harness to the Controller.

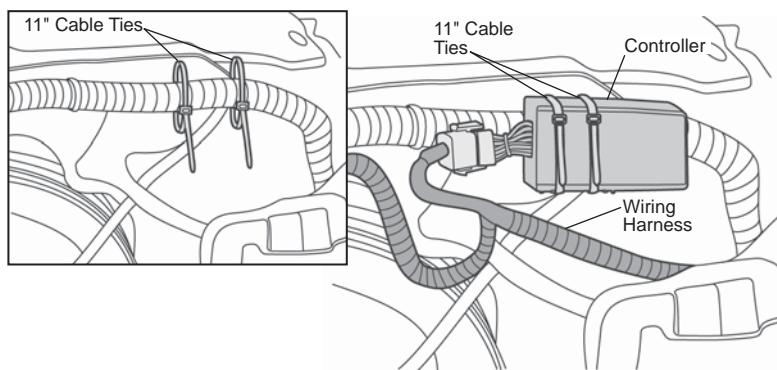


WARNING

Remove the fuse from the Wiring Harness.

10 Remove Fuse from Wiring Harness

Remove the fuse from the Wiring Harness. Failure to do so could result in severe electrical shock which could harm the installer and/or damage the vehicle.

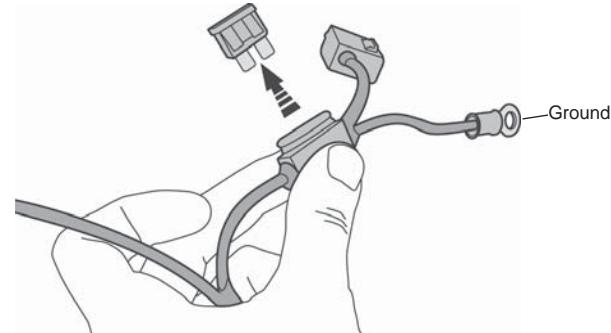


PowerBoard® NX – Installation Instructions

11 Attach Power Leads


Attach the red power lead to the positive battery terminal and black lead to the body ground.

Skip to next step if still attached from Step 1.

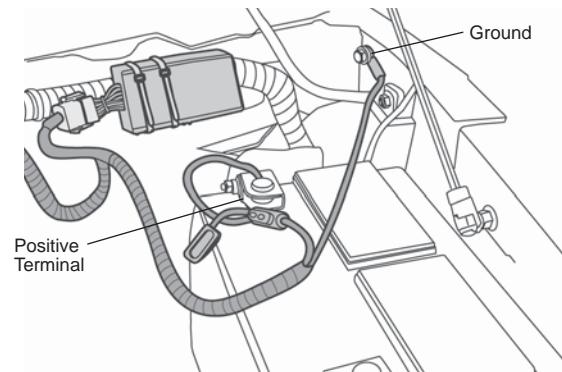

13 Install Wiring Harness

Route harness to motors and secure under vehicle with 7" Cable Ties.

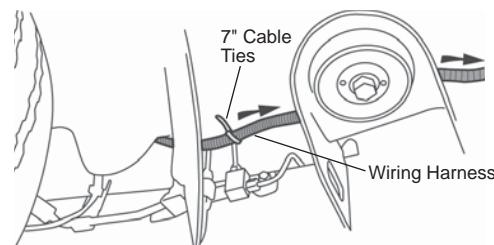


CAUTION

Do Not install on or near hot surfaces.

12 Secure Wiring Harness

Route the longer leg of the harness that terminates in a plug across the front of the engine compartment and down to the motor on the passenger side step. Route the shorter leg to the motor on the driver's side step. Use the 7" Cable Ties in the parts kit to secure the harness out of the way.

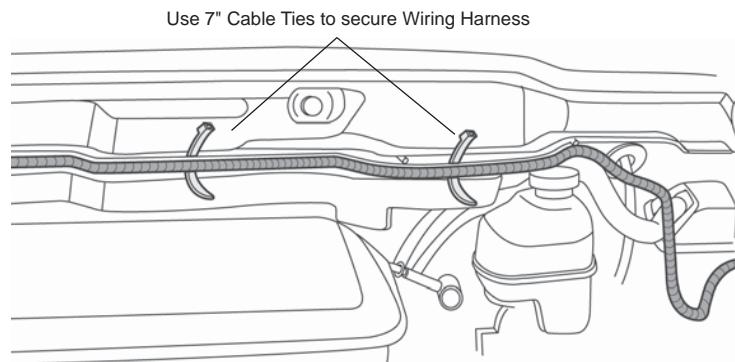


14 Install Receiver

Route the small diameter wire harness along the side of the frame. Find a location that is protected but is not surrounded by dense metal. Plug in the Receiver and insert 17" Nylon Zip Ties through the loops on the Receiver. Mount the Receiver with the stand off ribs against the vehicle.



NOTE Due to vehicle variations, installation may differ from that shown.

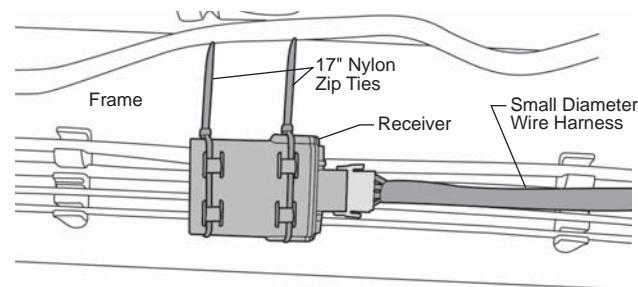


PowerBoard® NX – Installation Instructions

15 Install Running Boards

Mount the Steps to the linkages. Slide the mounting T-Nut into position. Install M6-1.0 x 20mm Socket Head Bolts to secure the boards. Use a 5mm Allen Wrench to tighten the bolts.

Make sure the board moves up and down freely by hand. If it binds, loosen the linkage to body attachment bolts and adjust the linkage position until the boards move freely. ***Do not tighten the bolts at this time.***


NOTE *Tightening the fasteners before cycling the step several times may create a bind, causing a squeaking sound and preventing the boards from retracting completely and evenly.*

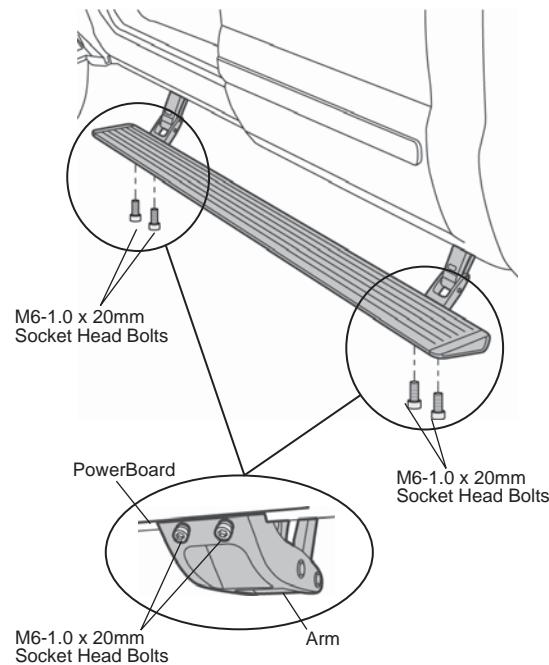

16 Install Motor


Slide Motor assembly onto drive shaft and mounting bosses of Motor Linkage assembly. Use three (3) M6-1.0 x 35mm Socket Cap Screws and M6 Flat Washers to secure Motor. Plug female connector into Motor.

Torque
5-7 ft. lbs.
(6.78-9.49 Nm / 60-84 in. lbs.)
Do not exceed 7 ft. lbs. of torque

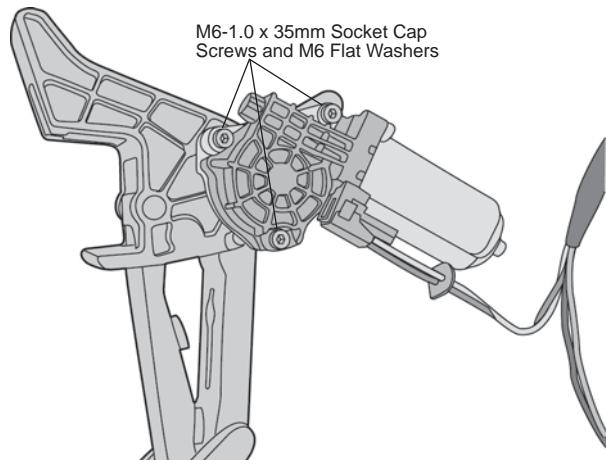

17 Install Magnet


Open the back door on the driver's side and clean the area where the magnet and sensor will be installed with a 50/50 solution of water and alcohol. Stick a magnet to the back side of the front door as shown. Hold the Drivers Front Sensor against the door pillar and position the magnet so it is directly in front of the sensor.

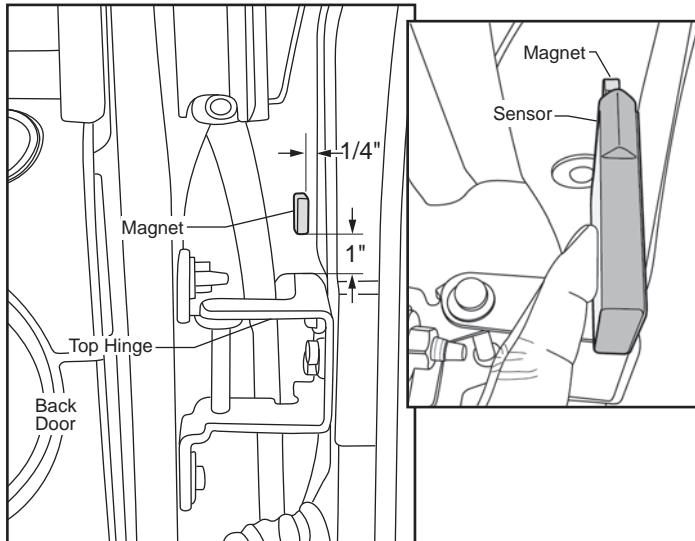

PowerBoard® NX – Installation Instructions


18 Install Driver's Side Front Sensor

Peel the liner off of the Drivers Side Front Sensor. Position it on the door pillar so it is about 1/6" away from the magnet. Press firmly on the Sensor to stick it to the pillar.

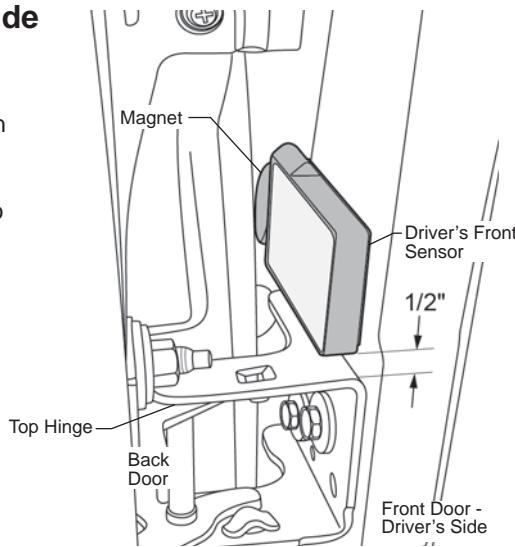


20 Install Driver's Side Rear Sensor

Peel the liner off of the Drivers Side Rear Sensor. Position it on the door pillar so it is about 1/6" away from the magnet. Press firmly on the Sensor to stick it to the pillar as in Step 21.

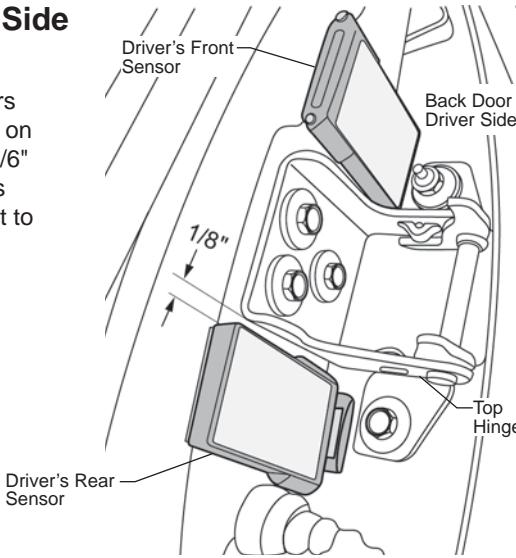

19 Install Magnet

Open the front driver's side door and clean the area where the magnet and sensor will be installed with a 50/50 solution of water and alcohol. Stick a magnet to the front side of the rear door as shown. Hold the Drivers Rear Sensor against the door pillar and position the magnet so it is directly in front of the sensor.

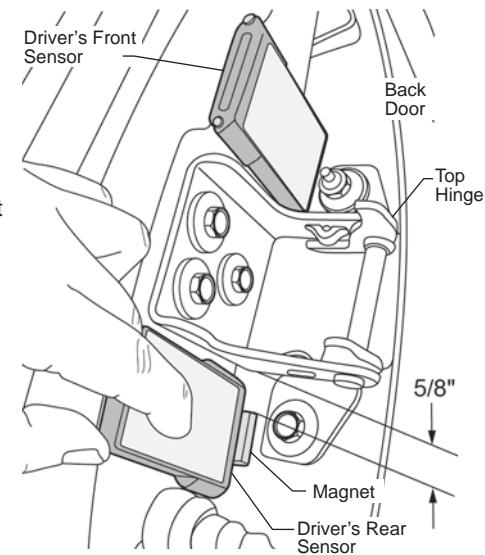


21 Install Passenger Side Sensors and Magnets

Repeat Steps 19 through 20 on the passenger side of the vehicle.

22 Reinstall Fuse

Reinstall fuse in PowerBoard® wire harness.

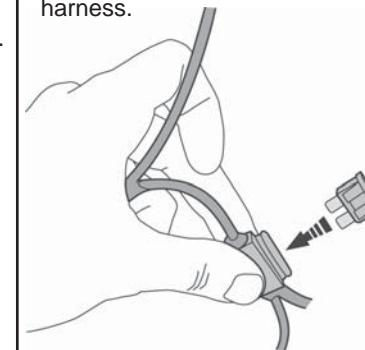

PowerBoard® NX – Installation Instructions

23 Test Doors and PowerBoards®

Open and shut each door to make sure the PowerBoards® deploy and retract. There is a slight delay in the board deployment so make sure they are fully down before stepping on them. There is also a 3-4 second delay in board retraction after the door is shut. This gives you time to open another door without cycling the board again. **Cycle the boards several times and then fully tighten all of the fasteners.**




CAUTION

Never force the board up or down. Use the motors to cycle the board.


Order to tighten screws:
Board to Linkage 1st
Linkage to Body 2nd

Torque
5-7 ft. lbs.
(6.78-9.49 Nm / 60-84 in. lbs.)
Do not exceed 7 ft. lbs. of torque

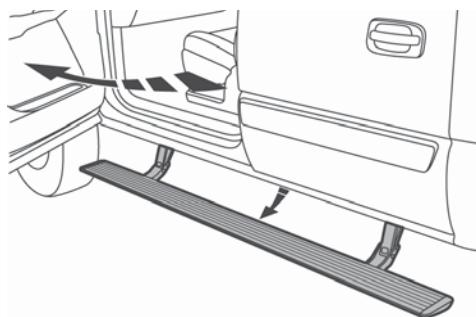



24 Install Lights

Clean the outboard surface of the Linkage below the bottom mounting bolt. Peel the adhesive liner off the back of the Light and firmly press it 1/8" below the mounting bolt. Plug the light into the connector with the black and orange wires in the wire harness. Repeat with the other three lights. Secure loose wires with Cable Ties.

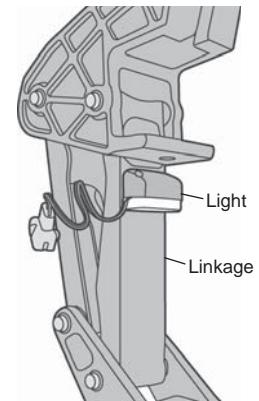

25 Install Magnet Holders

Peel the liner off the back of a magnet holder and place it around the magnet. Be careful not to move the magnet. Press firmly on the holder to stick it to the door. Repeat with all Magnet Holders.

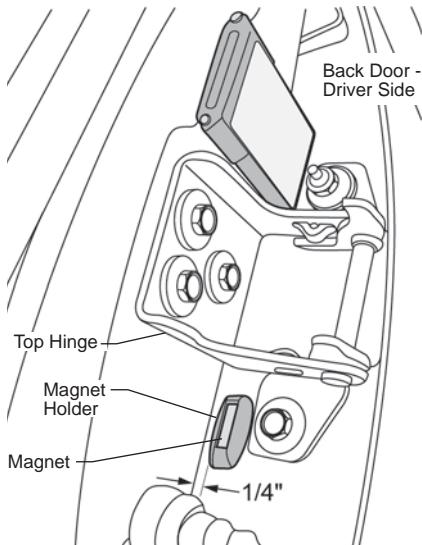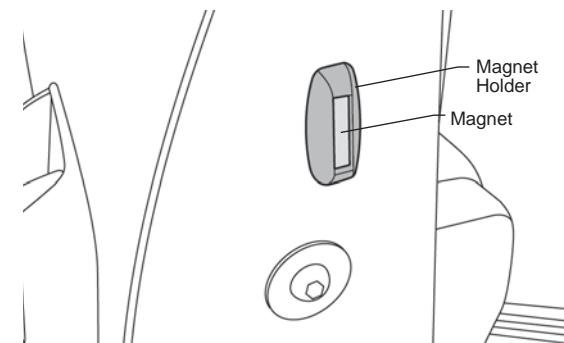

PowerBoard® NX – Installation Instructions

PowerBoard® NX Troubleshooting

Issue:

- Possible cause

Boards do not operate:

- Bad ground
- Bad battery connection
- Fuse burned
- Magnet is too far away from Sensor
- Bad receiver connection
- Sensor battery low

Board creaks or squeaks during operation:

- Gear shaft wedge bolt is loose
- Loosen mounting bracket and board attachment screws. Adjust linkages so they are parallel to each other and the noise is gone. Tighten all fasteners.

Intermittent operation:

- Bad battery connection
- Bad ground
- Magnet is too far away from Sensor
- Bad receiver connection
- Sensor battery low

Boards operate randomly:

- Wire connections not secure
- Magnet is too far away from Sensor
- Bad receiver connection
- Sensor battery low

Board stays down all the time and can be moved by hand:

- Gear shaft wedge screw is missing or loose

Board shakes and or shutters during operation:

- Bad ground
- Wire connections not secure
- Bad battery connection
- Links misaligned

Delay in board operation or boards operate after doors are shut:

- Magnet is too far away from Sensor
- Sensor battery low

Board hits body

- Install supplied adhesive bumper per the installation instructions.

Board does not fully retract or deploy

- The board is designed to stop travel when the system senses a load. Misalignment can cause the board to stop early. Remove the motor and adjust the linkage alignment until the board moves up and down freely without resistance by hand.

Board retracts when doors are left open for a long period of time.

- This is normal to save Sensor battery life.


PowerBoard® NX Service Tips

Adjusting Linkage alignment:

The board is designed to stop travel when the system senses a load. Misalignment can cause the board to stop early.

To adjust, remove running board and motor. Loosen mounting brackets. Adjust linkages parallel to each other. Shift the running board on linkages 1/8" in either direction and carefully set board on linkages. Start only a few threads of the allen head bolts – do not tighten yet. Lift running board to retracted position. Tighten allen head bolts that attach running board to linkage. Last, tighten linkages to body. Cycle running board by hand without motor and confirm zero resistance. Install motor and test.

Linkage Component Identification

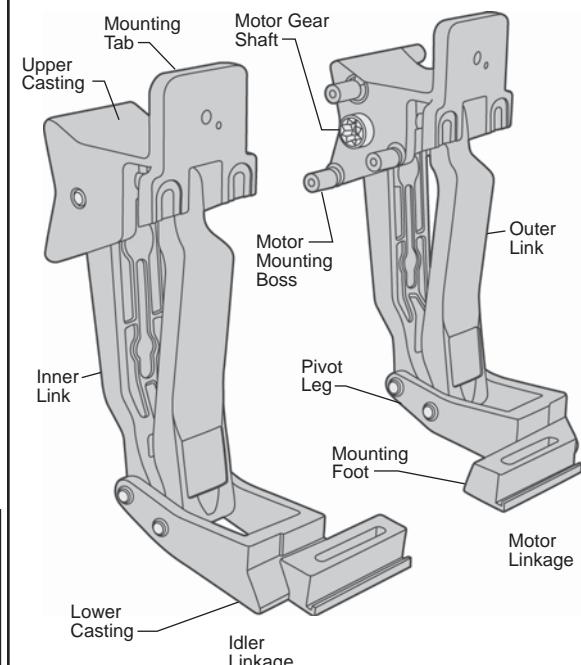


PowerBoard® NX – Installation Instructions

Battery Replacement

Each sensor is powered by a CR2450 3 volt battery that may periodically need to be replaced.

1. Remove the PowerBoard® wire harness fuse that is next to the car battery.
2. Remove the two screws and the cover plate on the sensor. Slide out the circuit board and note the orientation of the board. Replace the battery and slide the board back into the housing with its original orientation. Leave the vehicle door or doors open.
3. Reinstall the PowerBoard® fuse and wait 30 seconds. The sensor is reprogramming its address during this time.
4. Shut the door(s). Open and close the doors(s) to check for normal operation.

If opening a door fails to operate the PowerBoard, open the appropriate door and remove the PowerBoard® fuse. Wait 30 seconds and the reprogramming will repeat. Reinstall the fuse and check for normal operation.



This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

PowerBoard® NX – Installation Instructions

Care and Maintenance

The step pad surface and linkage arms should be washed with mild soap and water using a soft brush or sponge to dislodge any mud, dirt or accumulated road grime. Rinse with fresh water and avoid spraying the motors directly. After it is dry, lubricate the hinge with 3-IN-ONE Oil.

To prevent slipping, avoid applying waxes, lubricants or protectants like Armor All® to the step surface.

Attention!

TrekStep™ SHOULD ALWAYS BE STOWED IN THE RETRACTED POSITION WHEN DRIVING.

LIMITED WARRANTY

We warrant our product to be free from defects in material and workmanship, for the terms specified below, provided there has been normal use and proper maintenance. This warranty applies to the original purchaser only. All remedies under this warranty are limited to the repair or replacement of any item or items found by the factory to be defective within the time period specified. If you have a warranty claim, first you must call our factory at the number below for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misinstallation, misuse, Acts of God, or by defective parts not manufactured by us, is not covered under this warranty.

THE WARRANTY TIME PERIOD IS AS FOLLOWS FOR ALL PowerBoards® MANUFACTURED BY OUR COMPANY: THREE YEARS / 36,000 MILES FROM DATE OF PURCHASE.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For further information or request for warranty work, please contact:



Bestop Inc. Customer Service
Toll-Free: (800)845-3567
Main: (303)465-1755
E-mail: csbestop@Bestop.com
Website: www.Bestop.com