



**2021-Up Ford Bronco
Front Bumper LED Light Mounts for
Bright Earth 20" Curved Light Bar
628-32AOR
Installation Instructions**



INCLUDED HARDWARE:

Qty.	Description
2	Light Bar Brackets
4	M6 x 1.0mm Nylon-Insert Locknut
4	M6 x 1.0 x 30mm Allen Head Bolt



PRE-INSTALLATION:

Professional installation by a certified technician is strongly recommended. Not responsible for altered products. No claims are made regarding any devices. Any and all claims implied in this document excluded.

REQUIRED TOOLS:

- 4mm Allen Wrench
- 10mm Wrench
- Push Pin Removal/Pry Tool

NOTES:

Does NOT fit Bronco Sport models. Light bar NOT included.

INSTALLATION:

1. Using your pry tool, release the two-part push pins from the plastic trim surrounding the front tow hooks (4 per side) (**Figure 1**).

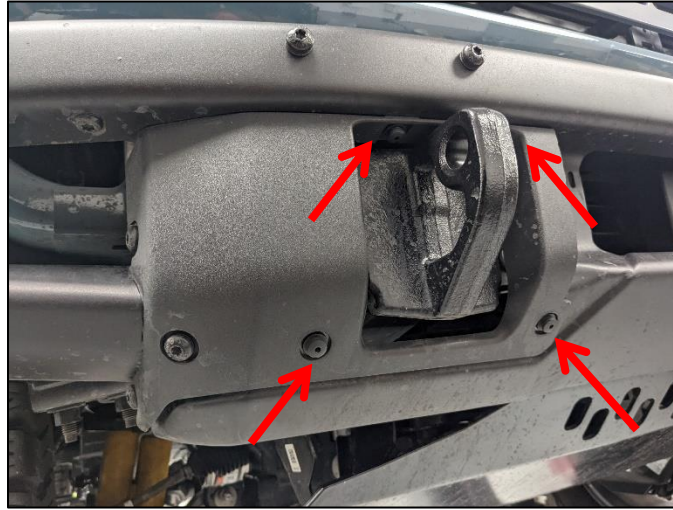


Figure 1

2. Mount your light bar brackets to the existing holes in the front bumper, using the supplied hardware. Brackets are side specific, but are slotted for adjustability (**Figures 2 and 3**).



Figure 2

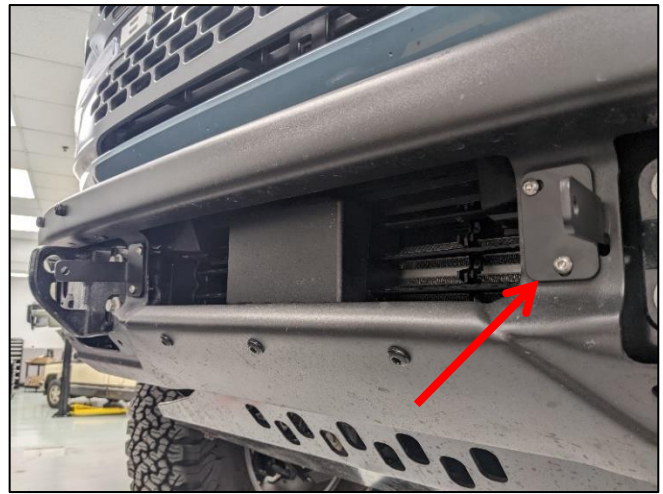


Figure 3

3. Attach your Bright Earth 20" Curved Lightbar with the fasteners included (**Figure 4**).



Figure 4

4. The plastic trim pieces removed in step one may be discarded or, if desired, trimmed to clear the brackets and reinstalled.

Technical Support: 1-866-464-6553

© 2022 Anvil Off Road. All Rights Reserved. Tous Droits Réservés.

199R12369

Date: 5-2-22