



INSTALLATION INSTRUCTIONS

VEHICLE APPLICATION

Year: 2007 - 2017
Make: RAM
Model: 2500/3500
Engine: 6.7L Cummins

CARB STATUS - Pending

Product will be submitted to Air Resources Board for approval shortly.

Not Legal for use in CA or other states adopting CA emissions standards"
See Page 2 for more info.

BEFORE YOU START

- Please read the entire product guide before proceeding.
- Ensure all components listed on page 2 are present.
- If you are missing any of the components, call our customer support at (909) 947-0015.
- Do not work on your vehicle while engine is hot.
- Make sure the engine is turned off and the vehicle is in Park or the Parking Brake is set.

1. Disconnect the CCV hose from the stock breather tube.

Tool Required: Pliers or 1/4" Nut Driver or Flat Blade Screwdriver



2. Remove the stock breather tube from the vehicle.

Tool Required: Pliers



3. Install the Elbow (D) onto the CCV Filter (B) with the two #12 Hose Clamps (C). Tighten the hose clamp at the CCV Filter.

Tool Required: 1/4" Nut Driver or Flat Blade Screwdriver



4. Install the CCV Breather assembly and tighten the #12 Hose Clamp (C).

Tool Required: 1/4" Nut Driver or Flat Blade Screwdriver



- 5a. Remove the stock intake tube from the vehicle and install the Plug (A) with the #12 Hose Clamp (C) into the CCV hose. Shorten the length of the CCV hose if desired. Reinstall the stock intake tube.

Tool Required: Hose Cutter, 1/4" Nut Driver or Flat Blade Screwdriver



- 5b. Install the Tube Cap (E or F) with the #12 Hose Clamp (C) onto the CCV port on the intake tube. Tighten the hose clamp. **Note:** 2013-2017 models use the 1" Tube Cap (E) and 2007-2012 models use the 3/4" Tube Cap (F).


Tool Required: 1/4" Nut Driver or Flat Blade Screwdriver



SEE EXPLODED VIEW ON PAGE 2



EXPLODED VIEW

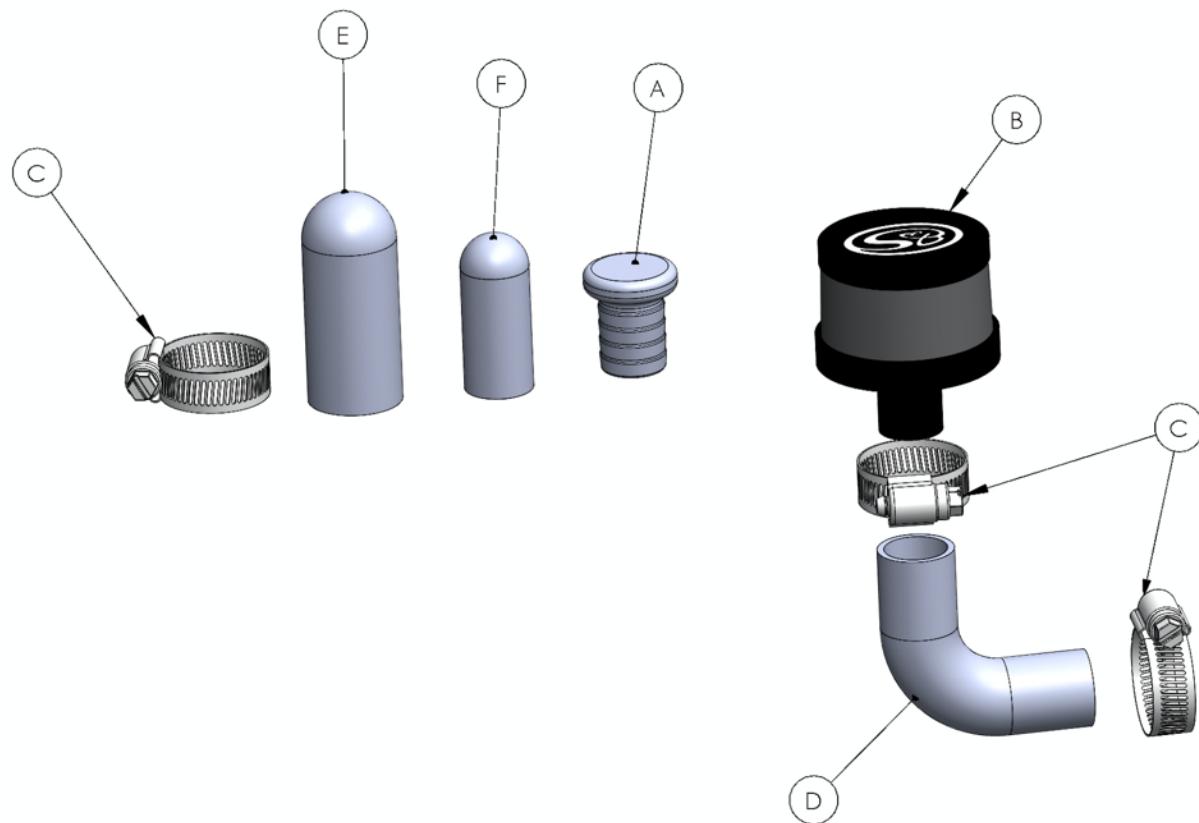

ITEM	QTY.	DESCRIPTION	P/N
A	1	CCV PLUG	AI1987-00
B	1	CCV FILTER	26-1519B
C	3	HOSE CLAMP, #12	AG1030-01
D	1	ELBOW	AI1984-00
E	1	TUBE CAP, 1"	AI1985-00
F	1	TUBE CAP, 3/4"	AI1986-00

Rev.A 07/19/2017