




LBZ SWITCH INSTALLATION

STEP 1 LOCATE ECM PLUG

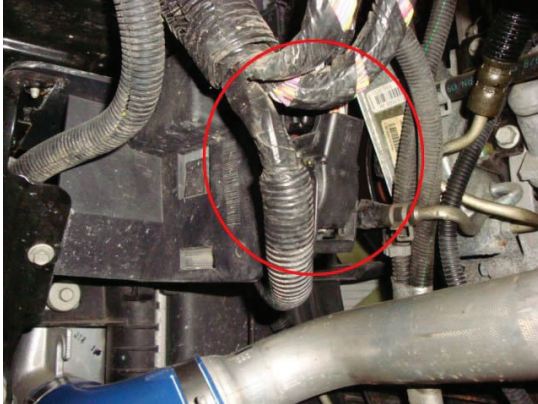


STEP 2 REMOVE THE LARGER PLUG



STEP 3 REMOVE PURPLE LOCKING CLIP *DO NOT LOSE*




STEP 4 REMOVE TOP COVER

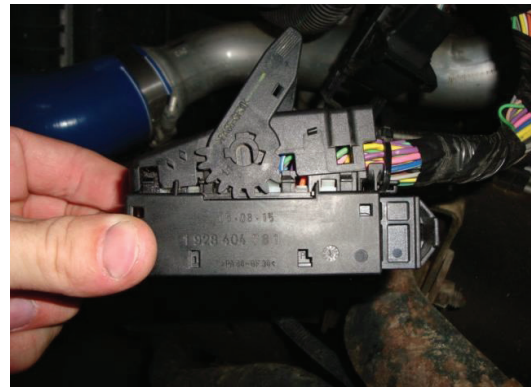

STEP 5 INSERT NEW PINS/WIRES *REVERSE PROCEDURES WHEN FINISHED*



STEP 6 PIN-OUT REFERENCE (VIEWED LOOKING AT CONNECTOR FACE)

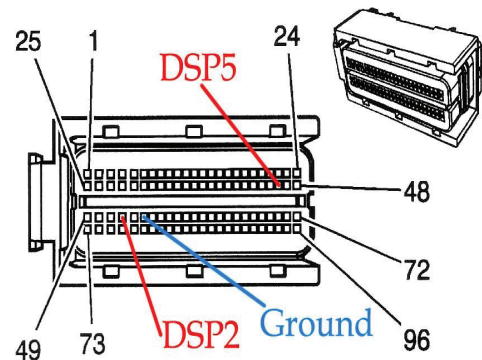

STOCK CONNECTOR	GDP TUNING WIRES
SIGNAL=CONNECTOR 1 (LARGER PLUG), PIN 46 (NEXT TO GREY WIRE)	SIGNAL = PURPLE
GROUND=CONNECTOR 1 (LARGER PLUG), PIN 54 (NEXT TO YELLOW/BLACK WIRE)	GROUND = BLACK

NOTE: IT MAY ALSO BE POSSIBLE TO MAKE THE GROUND CONNECTION IN THE CAB RATHER THAN THE ECM