



# LLY SWITCH INSTALLATION

## STEP 1

USE C3 GREY CONNECTOR



## STEP 2

LIFT GREY LEVER & DETACH  
ALL 3 PLUGS




## STEP 3

USE BOTTOM GREY CONNECTOR



## STEP 4

REMOVE PIN LOCK

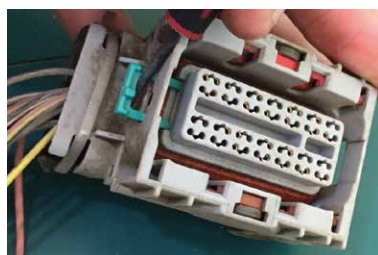

## STEP 5

REMOVE BLACK COVER, INSERT  
FLATHEAD SCREWDRIVER INTO  
UNLOCK CLIPS




## STEP 6

REMOVE BLACK COVER




## STEP 7

TOP VIEW OF CONNECTOR

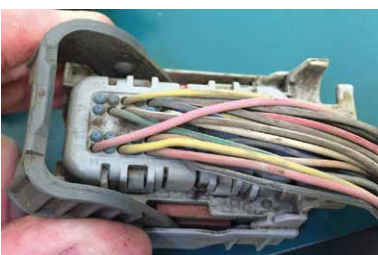


## STEP 8

LOCATE CORRECT  
PIN LOCATORS

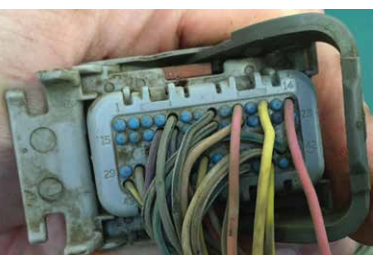

## STEP 9

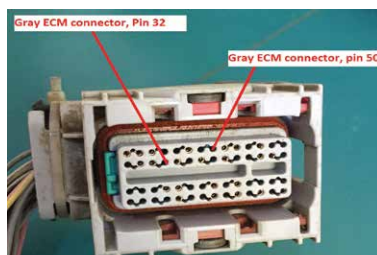


## STEP 10

REMOVE PIN FILLER



## STEP 11

INSERT PIN & WIRES TO LATCH,  
REINSTALL PIN LOCK

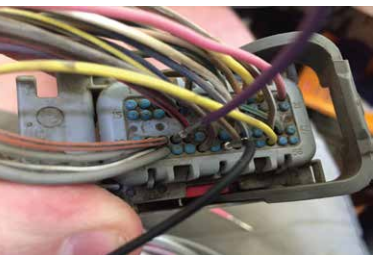

## STEP 12

REASSEMBLE CONNECTORS



### STOCK CONNECTOR

SIGNAL = GREY CONNECTOR, PIN 32  
GROUND = GREY CONNECTOR, PIN 50  
HIGH IDLE ENABLE = GREY CONNECTOR, PIN 6  
HIGH IDLE POWER = BLACK CONNECTOR, PIN 12

### GDP TUNING WIRES

SIGNAL = PURPLE  
GROUND = BLACK  
HIGH IDLE ENABLE = BLUE  
HIGH IDLE POWER = PINK