

# 1999-2003 FORD 7.3L POWERSTROKE ALUMINUM DEGAS TANK PARTS LIST & INSTALLATION GUIDE



## PARTS INCLUDED

- 1PC Aluminum Expansion Tank w/ Sight Glass
- 1PC Pre-installed 1/8" NPT plug

## TOOLS NEEDED

- 10mm Socket
- 3/8" Drive Ratchet & Extension
- Hose Clamp Pliers & Cable

**INSTALL TIME** 30 Minutes


**INSTALL DIFFICULTY**

## DISCLAIMER

- Allow vehicle to cool completely prior to attempting installation.
- Do not run the engine or drive the vehicle while overheating; serious damage can occur.
- Please dispose of any liquids properly.
- Mishimoto is not responsible for any vehicle damage or personal injury due to installation errors, misuse, or removal of Mishimoto products.
- Mishimoto suggests that a trained professional install all Mishimoto products.

## INSTALL PROCEDURE

1. Remove the cap on the expansion tank and drain the fluid from it.
2. Once the tank is empty, remove the bolts that secure the two sides.  
(3x 10mm bolts)

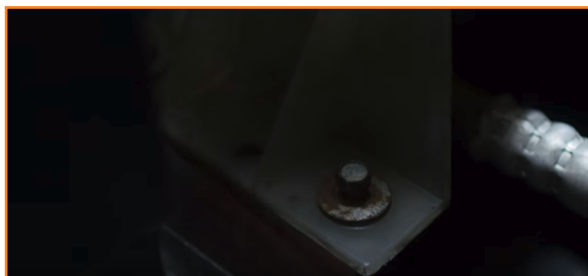

3. Lift the tank up now that it is loose and compress the clamp on the hose at the bottom to separate it from the tank. (1x spring clamp)



4. Compress the clamp on the smaller hose on the stock tank's upper port. Then pull the hose off the port. (1x spring clamp)



5. Remove the stock expansion tank.
6. Install the Mishimoto tank. Attach the hose to the bottom of the tank.



7. Attach the smaller hose to the tank's top port.

CONTINUED ON FOLLOWING PAGE

# 01

# 1999-2003 FORD 7.3L POWERSTROKE ALUMINUM DEGAS TANK INSTALLATION GUIDE



8. Secure the expansion tank with the original hardware. (3x 10mm bolts)
9. Fill the tank with coolant to the point where the sight glass at the side is half full.



10. Seal off the expansion tank with the cap.

**Congratulations! You have finished installing the Mishimoto 1999-2003 Ford 7.3L Powerstroke Aluminum Degas Tank.**