


# QUICK START INSTALL GUIDE *Hidden Hinge Version*

For Customer Service or Warranty Issues, Contact UnderCover Directly (866) 900-8800 www.undercoverinfo.com

## 1 Install Parts Check List

- A: 2 Rear Mounting Brackets
- B: 2 Hydraulic Struts
- C: 2 Front Mounting Brackets
- D: 8 Aluminum Clamps, Stainless Steel Bolts, Washers, & Lock Washers
- E: 4-Bar Hinge with Twist Knobs (pre-installed on cover)
- F: 2 J-Hooks and Wall Mounting Screws

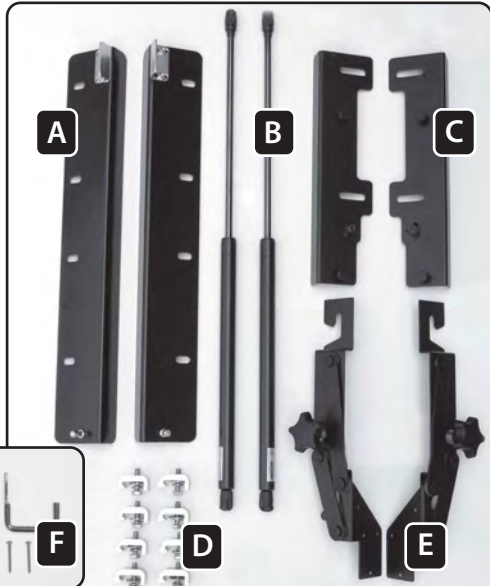

**Tools Needed** - 3/8" and 1/2" Wrench or Socket




**NOTE:** UnderCover Tonneaus are designed from trucks that do not have a bedliner (spray-in bedliners pose no problem). Trucks that have plastic drop in bedliners will require some minor trimming of the bedliner to ensure proper placement of the mounting brackets. Any modifications must be made to the bedliner and NOT the UnderCover mounting hardware. Modifications to the mounting hardware could result in improper installation and will void your warranty.

## 2 Rear Mounting Bracket

Install the rear bracket to the truck bed rail near the tailgate. Refer to the Model Specific Guide for measurements and special notes.

Use 2 clamps per bracket, install one clamp in hole 1 and one clamp in the hole nearest the tailgate that is unobstructed by the truck bed.

**!** Do not over tighten and distort the brackets.

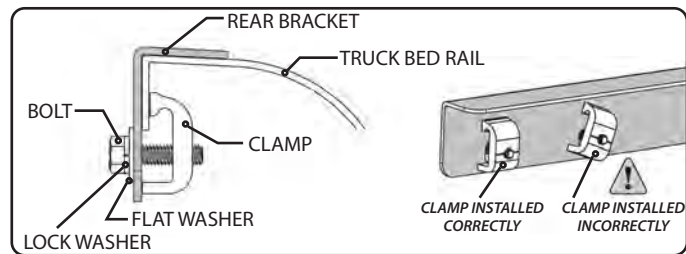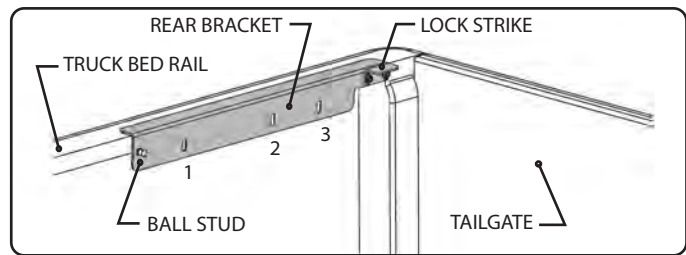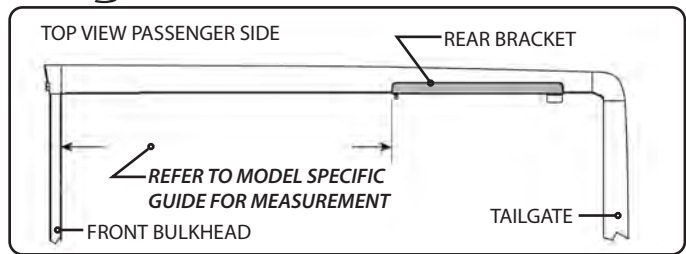




**⚠** Refer to Model Specific Guide for Special Notes Regarding Your Model

## 3 Front Mounting Bracket

Install the front bracket to the truck bed rail near the bulkhead. Refer to the Model Specific Guide for measurements and special notes.

Use 2 clamps per bracket, install one clamp in hole 1 and one clamp in hole 3. If hole 3 is obstructed by the truck bed, use hole 2.

**⚠** Do not over tighten and distort the brackets.

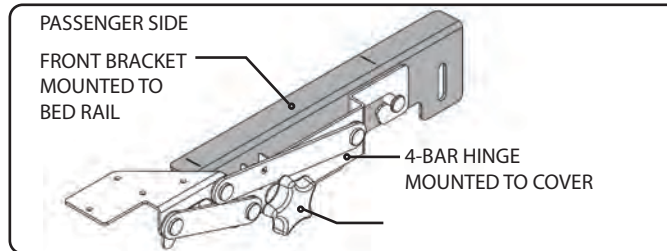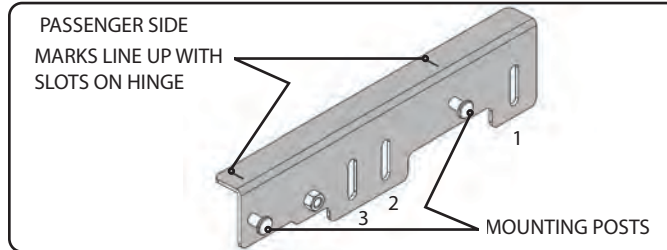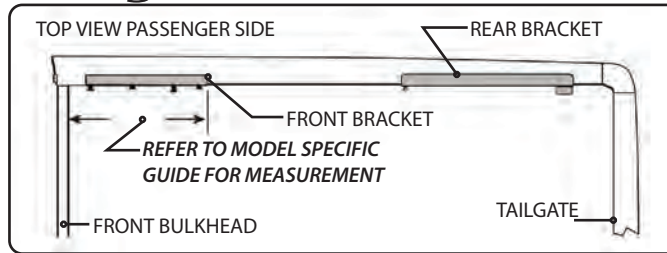

(866) 900-8800 [www.undercoverinfo.com](http://www.undercoverinfo.com)

## 4 Install Cover



With some assistance, set the bed cover on the truck bed. Slide the slots in the 4 bar hinges (attached to the cover) over the posts on the front mounting brackets. Push the cover forward to lock the hinges to the mounting brackets. Lift the cover up from the rear and tighten the twist knobs on both left and right hinges.

Install the hydraulic struts, attach large end to the cover and rod end to the rear mounting bracket (these will snap into place, no tools needed).



For Customer Service or Warranty Issues, Contact UnderCover Directly

**4.1** Install Cover (continued)

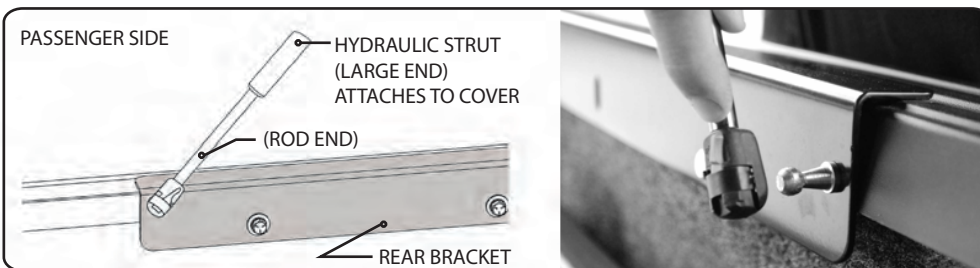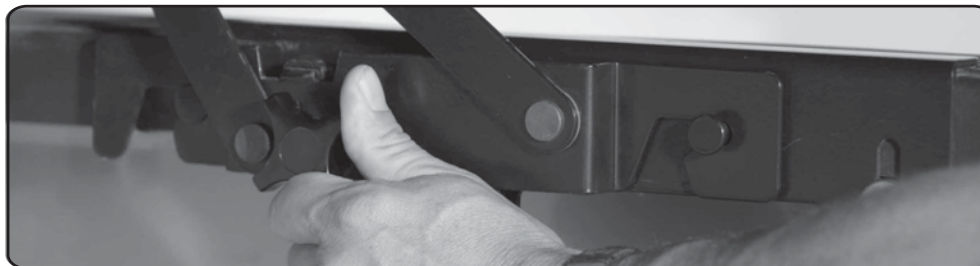

With your cover closed, take a quick inspection to make sure that it is not touching the bed on either side or the tailgate. The desirable gap is no less than 1/8" and no more than 1/4".

To adjust the cover front to back evenly, move both of the front brackets forward or rearward accordingly. To adjust to one side or the other, move the front brackets forward or rearward independently.




(866) 900-8800 [www.undercoverinfo.com](http://www.undercoverinfo.com)

**5** Final Adjustment

Be sure the front flap hangs over the bulk-head of the truck.

Adjust the lock strikes up or down accordingly. With the tailgate down adjust the lock strike to have approximately 1/8" gap between the lock and the lock strike.

With the tailgate up you should be able to turn the lock with out any resistance. Further adjustment may be needed to achieve this.

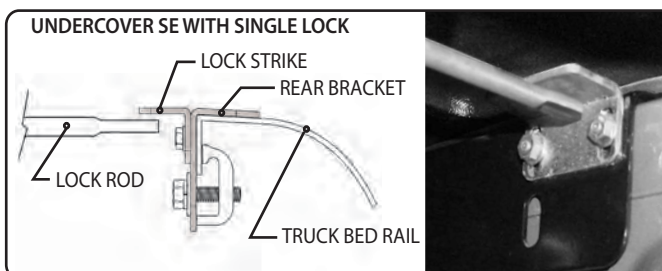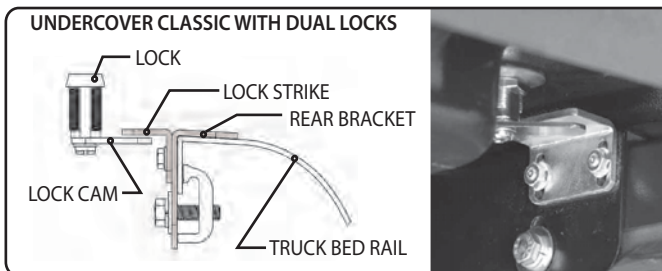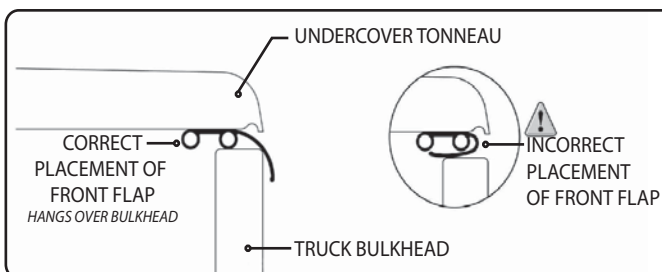

For Customer Service or Warranty Issues, Contact UnderCover Directly



## 1 Minute Removal

### 3 Easy Steps!

**Step 1** - Release strut off of ball stud, be sure to secure cover to prevent it from closing unexpectedly. Place loose end of strut in storage clip. Repeat for other side.

**Step 2** - Turn twist knobs until they release.

**Step 3** - Pull tonneau cover rearward, releasing hinge from mounting bracket, and lift the cover off.

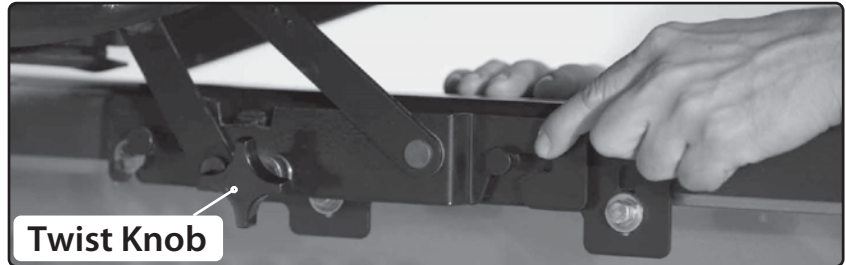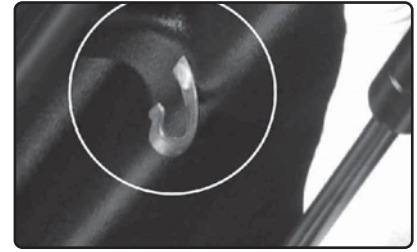



## 1 Minute Re-Install

### 3 Easy Steps!

**Step 1** - Place tonneau cover on the truck. Slide the slots in the 4 bar hinges (attached to the cover) over the posts on the front mounting brackets.

**Step 2** - Push the cover forward to lock the hinges to the mounting brackets. Lift the cover up from the rear and tighten the twist knobs on both left and right hinges.

**Step 3** - Re-install the struts.

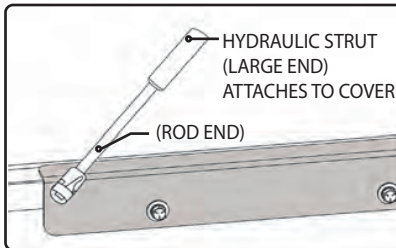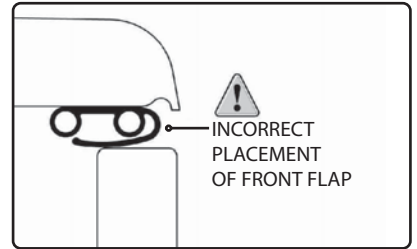

## Wall Hanging Instructions

**Step 1** - Prior to removing the tonneau, mount the two J-Hooks provided, on the garage wall. The hooks must have a minimum height from the floor of 84". Center horizontally 32" apart from each other.

**For long bed trucks mount 98" from floor.**

**Step 2** - Remove your tonneau from the truck bed.

**Step 3** - Hang the tonneau vertically on the hooks, under side against the wall, inserting the hooks into the holes provided.

