

97732 CHEVY/GMC STEALTH POD INSTALLATION GUIDE

INSTRUCTIONS

Part #s

63349,
63350,
63359, 63362

PART NUMBERS 63349 & 63350



PART NUMBERS 63359 & 63362



Part Numbers 63349 & 63350



**(2015-2019)
GM 2500/3500**

Part Numbers 63359 & 63362



Fits the A-Pillar below
commonly found in the
following vehicles:

- 2019-21 Chevy/GMC 1500
- 2022-24 Chevy/GMC 1500
WT & Custom Only

- 2020-23 Chevy/GMC
2500/3500
- 2024 Chevy/GMC
2500/3500 WT & Custom
Only

**(2019-2021) GM 1500
(2020-2023) 2500/3500**



**(2022-2024) 1500
WT & Custom ONLY
(2024) 2500/3500
WT & Custom ONLY**

Installation Guide

Note: If you've chosen to paint the pods yourself, please visit bankspower.com/paint to get perfectly matched spray paint. No primer is needed just three to four light coats.

What's Included



- iDash Stealth Pod
- A Step Bit
- A Hex Screw
- Washer
- 5mm Hex Key


If anything is missing, please call us at 800-601-8072 immediately!

Tools Required



- Plastic Pry Tool
- Socket Wrench
- 10mm Socket
- Drill

Step-by-step Installation

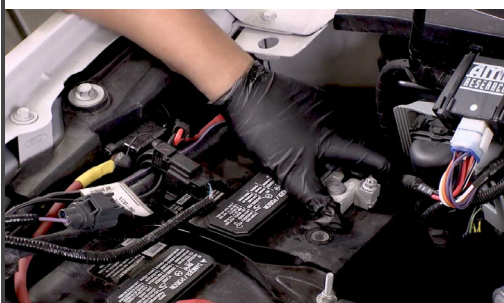

1. Before starting the installation, use your 10mm socket to remove the terminal and disconnect both batteries.

This is important because you'll be working near an airbag and you don't want it to go off.



2. Remove the fuse box cover on the left side of the dashboard.

Use your fingers, start at the bottom and pull away from the dashboard.

Don't be afraid to use force.



3. Pull off about three feet of the weather stripping from just below the dashboard to the top of the A-pillar.



4. Pry off the plastic covers that hide the bolts which secure the pillar to the frame.

Beware: If you use a screwdriver, it could leave a mark on the soft plastic. A plastic pry tool and/or rag is recommended.



5. With the 10mm socket, remove the two bolts.

6. Using just your hands, pry the pillar away from the truck.



There is a metal clip at the top of the plastic trim piece. The clip will click and release.

Now the pillar can be slid up and away from the dashboard.



Please Note:

Some trucks have an airbag retainer strap. If your truck does, slide the clip off the plastic trim piece before removing the pillar.

Important Detail: Drilling Locations

1. Place your pillar on an elevated surface like two objects to avoid drilling through and damaging your workbench.




You'll drill a hole near the lower bolt hole.

Note: This may be above or below depending on the application. This hole will be covered by the stealth pod.



**(2019-2021)
GM 1500**

**(2020-2023)
GM 2500/3500**

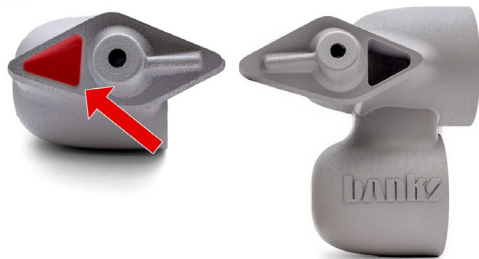

**Always
double-check
which pod
you have,
and where
the wire
pass-through
location is.
Only drill one
of the two
locations.**

Some stealth pods require
you to route the cables
above the bolt, and others
require below the bolt.



**(2015-2019)
GM 2500/3500**

2. Put the provided drill bit into your drill.



If you have a variable speed drill, we recommend the slowest speed setting.

The plastic on the pillar is soft and the drill cuts through it like butter.



Depending on which Stealth Pod you have, you may need to drill above or below the mounting bolt. Always check which pod you have before drilling.



IMPORTANT:

DO NOT attempt to drill the hole when the pillar is still in the truck. It could do damage to the airbags.

3. Drill your passthrough hole.



If you have 1 data cable to pass through, drill down to the 16mm step.


If you have 2 data cables, you may want to drill down to the 18mm step.

Start small and only enlarge if you need to.

4. Feed the OBD cable through the hole.



If the hole is too small just re-drill with the next step up on the drill. If you only have an iDash, you'll only feed in one OBD cable. But if you have a Derringer or PedalMonster, you'll have two.

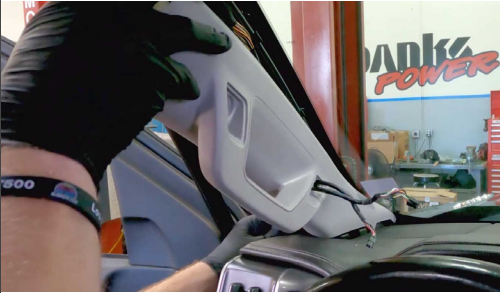

5. Loosely reinstall the a-pillar handle with your 4-pin and 6-pin cables passed through the hole.

Leaving just enough to reach the back of your iDash.




6. Route the cables.

Fish the wires through the metal pillar and down the dash to the fuse box area or out the bottom of the dash, depending on which Banks devices you have.



7. Push the weather stripping back in and snap the fuse box cover back on.

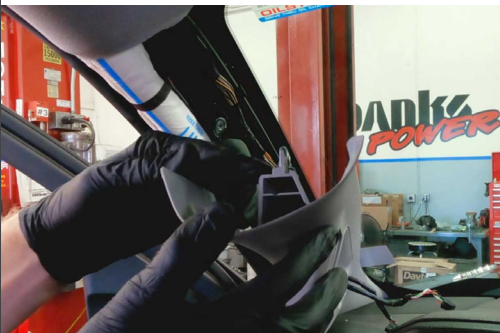

8. Slide the pillar into the dashboard so it fits flush and looks just like the passenger side.

When you're satisfied with the fit, snap the clip on the top back into the truck.



9. Reinstall the top 10mm bolt and reinstall the cap that hides the upper bolt.

Installing the Banks iDash Stealth Pods



1. Run the cable(s) through the hole you made.

Then press Stealth Pod flush to the pillar.



2. Insert the Banks supplied bolt into the Stealth Pod by hand, and thread it into the truck's a-pillar.

Start by hand and then use the supplied 5mm hex key to tighten it.

3. Attach the connectors to the back of the iDash.



Press the iDash into place, taking care to route the cables back to through the hole and into the pillar as you go.

The goal is to leave just enough slack so you can pull out the iDash if needed.



4. Before fully pressing the iDash into place, make sure the Banks logo lines up straight so your iDash is not crooked.

And enjoy your brand new iDash Stealth Pod!

[← Monster Exhaust for Newer Trucks](#)

[Stealth Pod Installation →](#)

NEED HELP? Call **800-601-8072** from 7am-5pm Pacific.

Latest Videos

[View All](#)

Pics or it didn't happen!

★ Popular

↺ Recent

P2609 and P0542 Codes |