



***DOWNLOAD ENHANCED  
INSTALL MANUALS AT  
DieselPerformance.com***



# **BD DODGE CUMMINS PERFORMANCE**

# **EXHAUST MANIFOLD**

## **Installation Instructions**

Application List		
1994-1998	12V	1045948
1998½-2002	24V	1045947

**Please read all instructions before installation**

**Unless an EO# is listed, this product is legal in California for racing vehicles only,  
which may never be used upon a highway**

BD Engine Brake Inc.









Plant Address: 33541 MacLure Rd. Abbotsford, BC, Canada V2S 7W2

U.S. Shipping Address: 88-446 Harrison St, Sumas, WA 98295 U.S. Mailing Address: P.O. Box 231, Sumas, WA 98295

Phone: 604-853-6096 | Fax: 604-853-8749 | Internet: [www.bd-power.com](http://www.bd-power.com)

# KIT CONTENTS:

Please check to make sure that you have all the parts listed in this kit **before** you start the disassembly of your truck.




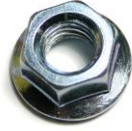



DODGE 1994-1998 12V Performance Manifold (BD# 1045948)			
1405948		FT-11509452	1405986 1462441
			 
12V Manifold		Washer; M10 SS	Bolt; M10x45mm Nut; M10
Qty: 1		Qty: 4	Qty: 2 Qty: 4
1462430	1405936	FT-11113082	FT-11116075
			
Stud; M10 x 30mm	Spacer; 12v Coolant	Bolt; M8x95mm	Bolt; M10x 60mm
Qty: 2	Qty: 1	Qty: 1	Qty: 10
1401556	1200208	1405981	1405937
			
Washer; M8	Plug; 1/8" NPT	Bolt; M10x 35mm	Spacer; Manifold
Qty: 1	Qty: 2	Qty: 2	Qty: 10

BD Engine Brake Inc.

Plant Address: 33541 MacLure Rd. Abbotsford, BC, Canada V2S 7W2

U.S. Shipping Address: 88-446 Harrison St, Sumas, WA 98295 U.S. Mailing Address: P.O. Box 231, Sumas, WA 98295

Phone: 604-853-6096 | Fax: 604-853-8749 | Internet: www.bd-power.com

<b>DODGE 1998½-2002 24V Performance Manifold (BD# 1045947)</b>			
<b>1405947</b>	<b>FT-11509452</b>	<b>1405986</b>	<b>1462441</b>
			
<b>12V Manifold</b>	<b>SS Washers</b>	<b>45mm Bolt</b>	<b>Nut</b>
<b>Qty: 1</b>	<b>Qty: 4</b>	<b>Qty: 2</b>	<b>Qty: 4</b>
<b>1462430</b>	<b>1200208</b>	<b>1405981</b>	
			
<b>Stud; M10 x 30mm</b>	<b>Plug; 1/8" NPT</b>	<b>Bolt; M10x 35mm</b>	
<b>Qty: 2</b>	<b>Qty: 2</b>	<b>Qty: 2</b>	

## Options

<b>Description</b>	<b>Part #</b>
12V Exhaust Manifold Gasket Set	1045981
24V Exhaust Manifold Gasket Set	1045986

## Removal

Remove the intake air hose from the front of the turbo and disconnect the coolant line brackets from the stock manifold.

Now disconnect the turbo from the stock manifold by removing the 4 15mm nuts. *Note that you do not need to remove the turbo from the engine compartment.*

Once the turbo is disconnected from the manifold, remove the manifold by removing all the bolts using a 13mm socket.

Once the manifold is removed, clean the head and turbo flange surfaces of any debris.

Remove the two studs from the turbo exhaust housing and discard.

BD Engine Brake Inc.

Plant Address: 33541 MacLure Rd. Abbotsford, BC, Canada V2S 7W2

U.S. Shipping Address: 88-446 Harrison St, Sumas, WA 98295 U.S. Mailing Address: P.O. Box 231, Sumas, WA 98295

Phone: 604-853-6096 | Fax: 604-853-8749 | Internet: www.bd-power.com

Remove the two studs from the stock manifold and install them into the same hole location of the performance manifold.

## ***Installation***

1045948 comes with 10 new manifold flange bolts and spacers which will replace the OEM spacers and bolts. Be careful not to mix the new bolts/ spacers with the OEM hardware.

***INSTALL 6 NEW GASKETS IN BETWEEN THE HEAD AND THE MANIFOLD. THE RIDGE ON THE GASKETS CAN FACE EITHER THE HEAD OR MANIFOLD.***

Install the new performance manifold utilizing the factory bolts and spacers. You will need to use the two 10x35mm long stainless Allen bolts and washers for the two top mounting holes of the center section of the manifold. Torque bolts to 35 ft/lbs.

You may have to adjust the manifold to head alignment. Bolt the manifold center piece to the head, then use a plastic mallet to align the end/outside manifold pieces.

***INSTALL A NEW GASKET IN BETWEEN THE TURBO AND THE MANIFOLD. THE RIDGE ON THE GASKET CAN FACE EITHER THE MANIFOLD OR TURBO.***

Place the turbocharger onto the performance manifold, the two studs should be inserted in the turbocharger flange. Use the supplied 14mm nuts.

Use the remaining two 10 x 45mm Stainless Allen head bolts and washers to secure the turbocharger to the manifold. Tighten to 35 ft/lbs.

After installation is complete, re-install the coolant line brackets.

Re-install intake air hose.

***RE-TORQUE ALL BOLTS AFTER AT LEAST ONE HEAT CYCLE***