

2015-Current Ford F-150 Supercab and 2017-Current Ford F-250 to F-550 Super Duty Supercab *Underseat Storage*

Fits DU-HA Part Numbers

20106

20107

20108

20109

Installation Instructions:

- 1 Flip up the seat bottoms of the back seats. Factory Divider
- 2 If your truck comes with a large **Pro Power Onboard - 2KW Inverter** on the drivers side please turn to page 3 for instructions. Using an 8mm socket remove the top two bolts from the factory storage divider (as shown by arrows in picture 1). **Note:** Some models do not have the factory divider or bolts. Refer to following page on how to create threads so you can use the knobs for installation. Some trucks have a vinyl floor which makes the DU-HA sit lower see following page for further instructions.
- 3 Position the DU-HA (A) under the back seat with the cut out slots in the DU-HA facing towards the truck bed.
- 4 Secure the DU-HA (A) in the truck using the knobs (D), insert the knob through the slot in the back of the DU-HA and thread into the holes from the previously removed bolts.
- 5 Install the (B) Foam Organizer / Gun Rack and (C) Plastic Stiffeners by sliding them into the channel slots inside the DU-HA, making sure the high side faces towards the front (as pictured). Pull the lever under each back seat to return the seat bottoms to the down position. *Please note: When the seat is down, it does not latch. The seat is designed to latch only when it is up. (To test this, you may put the seat down without the DU-HA underneath. Note that it does not latch down.)*




This is how the DU-HA should look installed under the back seat.

Safety Instructions:

Warning: Seat bottoms must be down at all times while vehicle is moving. Make sure the DU-HA is secured in the vehicle according to installation instructions. Do not store explosives or hazardous materials in the DU-HA. Do not place loaded guns in the DU-HA.

For further instructions refer to truck owners manual or contact DU-HA, Inc.

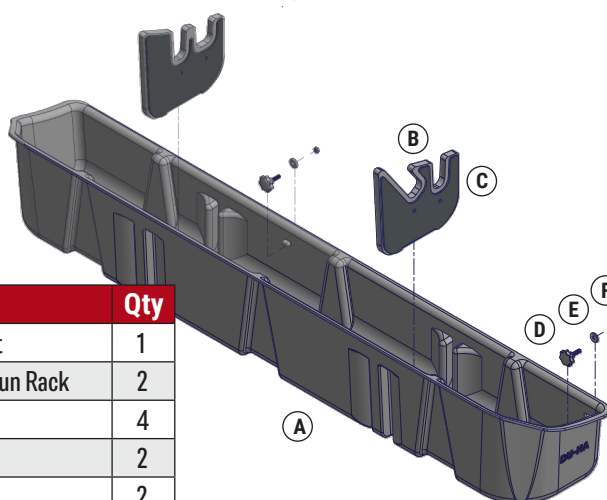

Part	Part #	Description	Qty
A	...	DU-HA Storage Unit	1
B	Divider-20106	Foam Organizer / Gun Rack	2
C	Divider-20106	Plastic Stiffener	4
D	1001043	Knob	2
E	1001201	Nut – M6	2
F	1001155	Washer – M6	2
G	1001102	Bolt – M6 Taptite	1

2015–Current Ford F-150 Supercab *and* 2017–Current Ford F-250 to F-550 Super Duty Supercab

Underseat Storage

Installation Instructions: (Create Threads)

Fits DU-HA Part Numbers


20106

20107

20108

20109

- 6** If your truck did not come with the factory divider as shown in picture 6 follow these steps to create the threads in the top holes of the factory seat brackets so you can use the supplied knobs to install your DU-HA.
- 7** Using a 10mm socket and a drill or impact driver take the supplied M6-1.0 metric bolt (G) and drive it in and out of the top holes of the factory seat brackets. The bolt is a self-threading bolt that will create the threads needed so you can use the knobs to secure your DU-HA in your truck. Once you have created the threads make sure the knob will thread in and out of the holes. If it seems tight you can run the bolt in and out of the holes again. Be careful not to cross thread if you do run the bolt in and out again, start bolt by hand. Once you have verified the knobs thread properly, return to the previous page to step 3 to continue the installation of your DU-HA.
- 8** Some models of trucks have a vinyl floor and do not have the factory divider. To install the DU-HA in this type of truck set the DU-HA under the rear seat and position it so the slots are facing the back of the truck and line up with the larger middle hole and slot in the seat brackets. Next use the provided M6 knobs, M6 washers and M6 nuts to secure the DU-HA to the seat brackets.

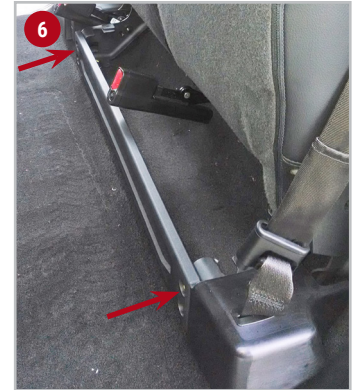

2015 – Current Ford F-150 SuperCab and 2017 – Current Ford F-250 to F-550 Super Duty SuperCab

Fits DU-HA Part Numbers
20106
20107
20108
20109

Underseat Storage


Installation Instructions: Pro Power Onboard - 2 KW Inverter

If your truck is equipped with the Pro Power Onboard - 2 KW inverter, please follow the following steps.

- 2B** Locate the tire change tool kit mounted in front of the Pro Power Onboard - 2 KW Inverter. Unscrew the large plastic knob that holds the tire change tool kit in place. There should be a metal bracket remaining once removed.



- 2C** Using a 10mm socket and a drill or impact driver, remove the three bolts holding the metal bracket in place. 

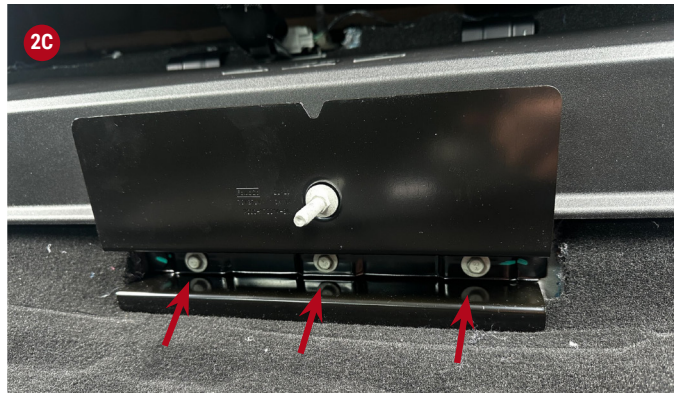

- 2D** There should be two plastic pop rivets remaining. Using a prybar or flathead screw driver, carefully pry the back of the bracket and wiggle slowly to get the pop rivets out. Once the pop rivets are removed, you should be able to take off the bracket. Once the bracket is removed you can flip back to the first page and continue on to step 3. There are several places behind and under the seat you can restow your tool pack without this bracket.

