

## INSTALLATION INSTRUCTIONS


### PRODUCT: ALL LIGHTS ON™

FPE-2020-1  
January, 2020  
Page 1 of 1

**INSTRUCTIONS FOR:** 2015-2019 Tahoe, Suburban, Yukon, Yukon XL, Silverado and Sierra


**ESTIMATED INSTALLATION TIME:** 5-10 minutes

**STEP 1:** Locate the Body Control Module (BCM) located just under the dash on the driver's side of the vehicle. The BCM will have 7 connectors, each a different color. You will be removing the brown connector.

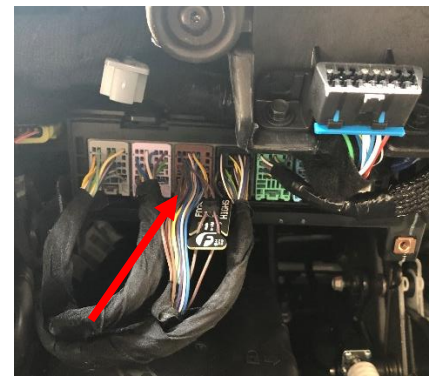


**STEP 2:** Disconnect the brown connector from the BCM. Remove any tape or wrap to expose enough of the wires to install the All Lights On™ module (3-4 inches).

**STEP 3:** Locate pin 10 (fog lamp control). The wire is *brown or tan with a white stripe*. From the bottom right side of the connector, count over 5 pins and up 3 pins to locate the wire. Route this wire through the circuit board and connection labeled "fogs".

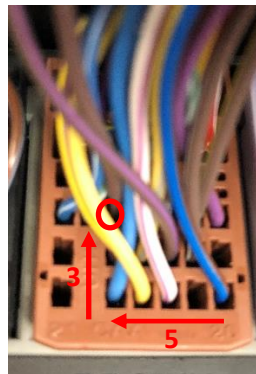

Pin 10, Fog Light Signal

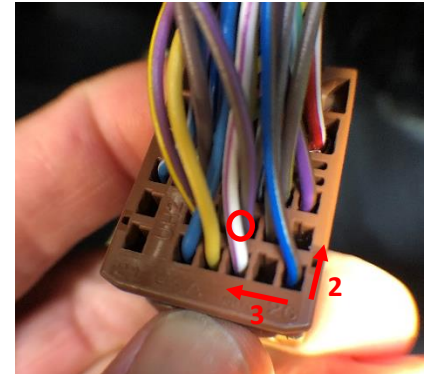

Pin 18, High Beam Signal

**STEP 4:** Locate Pin 18 (high beam control). The wire is *brown or tan with a purple stripe*. From the bottom right side of the connector, count over 3 pins and up 2 pins to locate the wire. Route this wire through the circuit board and connection labeled "highs".

**STEP 5:** Position the cover over the wires and squeeze it downward with a pair of pliers to force the wires into the insulation displacement prongs. Install the brown connector back into the BCM.

*NOTE: The connector cover is a one-time use part. Double check the pin locations before installing the cover, it cannot be removed and re-used.*

**Operation:** Low beams and fog lights will operate normally, when high beams are activated, the fog lamps and low beams will remain on.

**NOTE:** For dual filament bulbs - only your fog lamps will remain activated when the high beams are turned on with the All Lights On™ module.



Route wires as shown



Install cover to seat wires