

INSTALLATION INSTRUCTIONS



PRODUCT: ALL LIGHTS ON™

FPE-2020-4
January, 2020
Page 1 of 1

INSTRUCTIONS FOR: 2015-2019 Chevy Colorado and GMC Canyon


ESTIMATED INSTALLATION TIME: 5-10 minutes

STEP 1: Locate the Body Control Module (BCM) located just under the dash on the driver's side of the vehicle. The BCM will have 7 connectors, each a different color. You will be removing the brown connector.

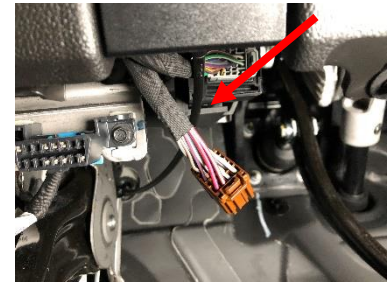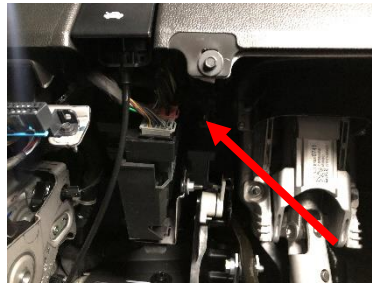


STEP 2: Disconnect the brown connector from the BCM. Remove any tape or wrap to expose enough of the wires to install the All Lights On™ module (3-4 inches).

STEP 3: Locate pin 13 (fog lamp control). The wire is *brown with a white stripe*. From the bottom right side of the connector, count over 2 pins and up 3 pins to locate the wire. Route this wire through the circuit board and connection labeled "fogs".

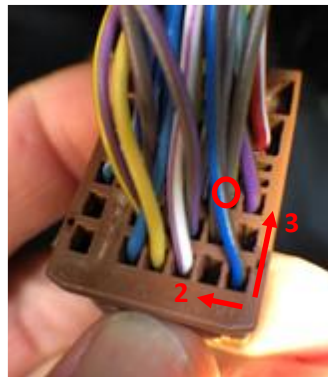

Pin 13, Fog Light Signal

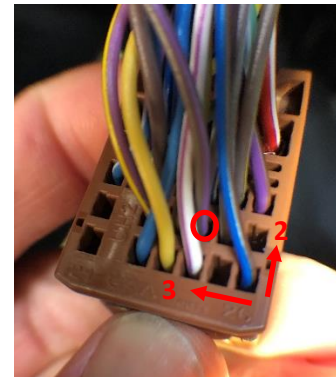

Pin 18, High Beam Signal

STEP 4: Locate Pin 18 (high beam control). The wire is *brown with a purple stripe*. From the bottom right side of the connector, count over 3 pins and up 2 pins to locate the wire. Route this wire through the circuit board and connection labeled "highs".

STEP 5: Position the small black cover over the wires and squeeze it downward with a pair of pliers to force the wires into the insulation displacement prongs. Install the brown connector back into the BCM.

NOTE: The connector cover is a one-time use part. Double check the pin locations before installing the cover, it cannot be removed and re-used.

Operation: low beams and fog lights will operate normally, when high beams are activated, the fog lamps and low beams will remain on.

NOTE: For dual filament bulbs - only your fog lamps will remain activated when the high beams are turned on with the All Lights On™ module.

