

INSTALLATION INSTRUCTIONS

SUBJECT: COLD WEATHER UPGRADE KIT FOR FLEECE PERFORMANCE INTAKE

FPE-2026-161
May, 2026
Page 1 of 3

FITMENT: 2007.5-2024 2500/3500/4500/5500 RAM with 6.7L Cummins and Fleece Performance Intake (FPE-CUMM-IHK-0724)


KIT P/N: FPE-CUMM-IAH-X2

EST INSTALL TIME: 30 minutes

TOOLS REQUIRED: 8mm socket

KIT CONTENTS:

Item	Description	Qty
1	Heater power cable	1
2	Heater crush washer	1
3	Heater	1
4	M5 lock nut	2

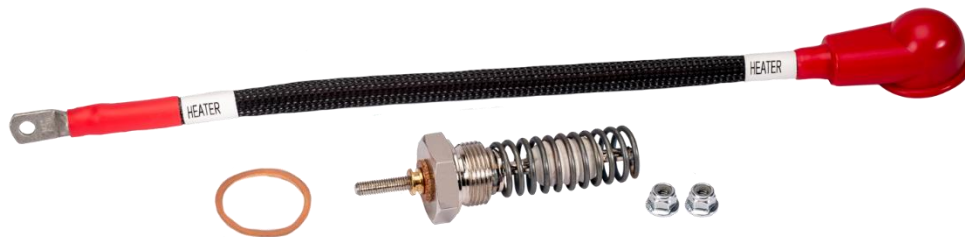

WARNINGS:

- Use of this product may void or nullify the vehicle's factory warranty.
- User assumes sole responsibility for the safe & proper use of the vehicle at all times.
- The purchaser and end user releases, indemnifies, discharges, and holds harmless Fleece Performance Engineering, Inc. from any and all claims, damages, causes of action, injuries, or expenses resulting from or relating to the use or installation of this product that is in violation of the terms and conditions on this page, the product disclaimer, and/or the product installation instructions. Fleece Performance Engineering, Inc. will not be liable for any direct, indirect, consequential, exemplary, punitive, statutory, or incidental damages or fines caused by the use or installation of this product.

INSTALLATION INSTRUCTIONS

PROCEDURE:

FPE-2026-161
May, 2026
Page 2 of 3

STEP 1: Remove the intake heater plug. Remove the heater plug installed on the front of the intake horn.



STEP 2: Install the secondary heater. Install the crush washer over the heating element and install the heater into the intake horn.



STEP 3: Install the heater power cable. Using one of the M5 lock nuts provided, attach the cable end with the protective boot to the heater using an 8MM socket. Cover the end of the terminal with the protective boot.




INSTALLATION INSTRUCTIONS

FPE-2026-161
May, 2026
Page 3 of 3

STEP 4: Remove the M5 nut from the heating element on the back side of the intake horn. Route the secondary heater cable underneath the intake horn and place the eyelet over the heater stud. Install the M5 locknut with an 8 MM wrench or socket.

STEP 5: Slide the rubber boot over the heater post.

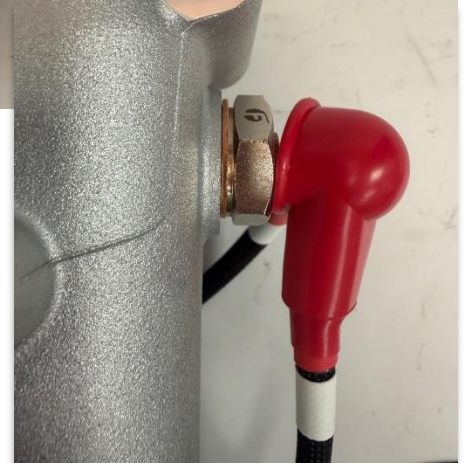

Reference images of the installed product at right

