

2015+ Chevy Silverado HD Boss Grille Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-357-9261
Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)
Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.

| KIT CONTENTS: | |
|--|------|
| Description | Qty. |
| Boss Grille | 1 |
| 1/4" - 20 x 3/4" SS bolt | 8 |
| 1/4" - 20 SS Lock Nut | 8 |
| 1/4" SS Washer | 8 |
| Only for Lighted Grille (below) | |
| 10" Luminix Light | 2 |
| Wiring Harness | 1 |
| Switch | 1 |
| Light Bar Instructions | 1 |

Tools Needed:

- 7mm, 10mm Wrench
- Flat Head Screw Driver
- Saw- Recommended:
Oscillating Hand Tool
- Pliers

Grille Installation

1. Remove Grille from packaging. Check to see if all parts from above table of kit contents are included.



2. Remove plastic cover by removing 12 retaining clips with flat head screw driver (locations shown above).




3. Once cover is removed, remove the top 4 grille screws with 10mm wrench (location shown above).

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.




4. Remove grille by pulling grille forward away from the truck.

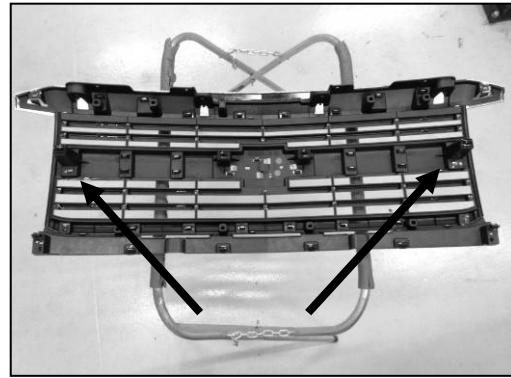

5. Remove (2) 7mm bolts (locations shown above) from back of grille. Unclip chrome tabs and bowtie tabs (use flat head screw driver). take bowtie and middle chrome section of grille off.

6. Use saw to cut inner section of grille out (shaded area below).

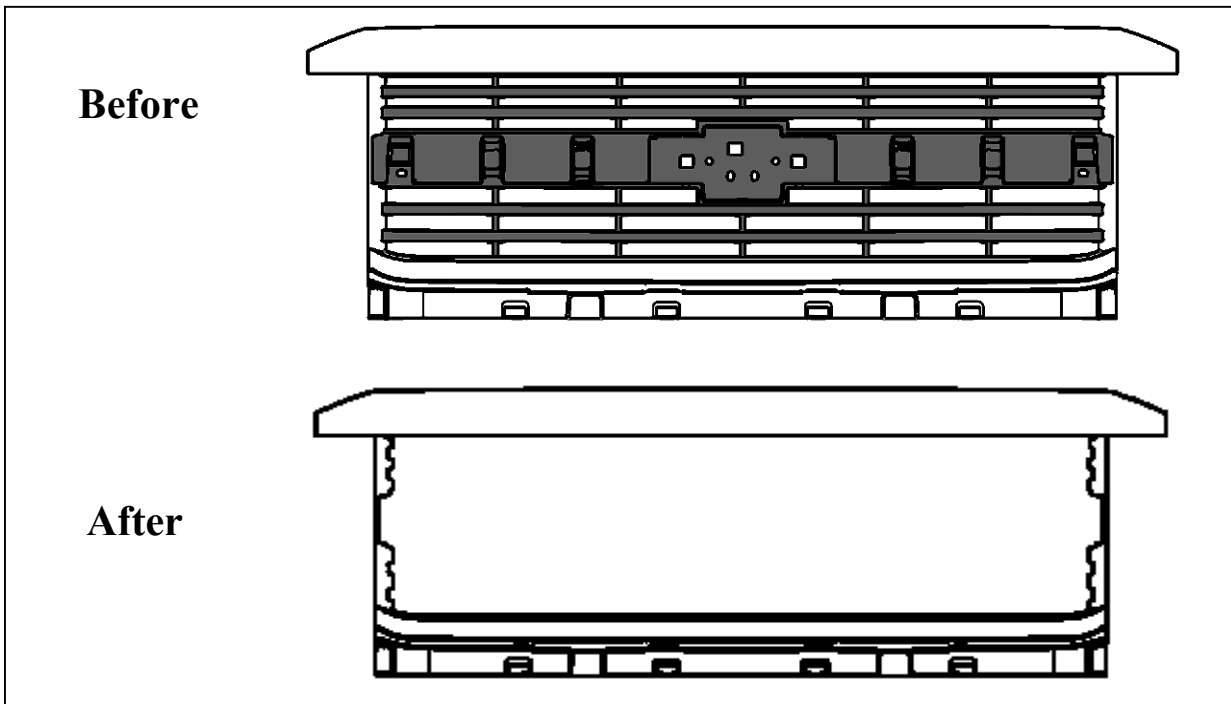

7. Insert Putco grille into the grille shell. Position grille in grille shell and mark holes through brackets for drilling. Removed Putco grille and drill 1/4" holes in locations marked.

8. Reinsert grille into grille shell and bolt in using supplied hardware. Bolt head goes against bracket on the back of the Putco grille. Tighten bolts using a 7/16" wrench.

For Lighted grilles, refer to Wiring Installation on Light Bar Installation Instructions for wiring instruction.

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.