

INSTALLATION INSTRUCTIONS

PUTCO PURE ROOF LIGHTS

#900532, #900534, #900556 (DODGE)



Please note: You must follow these instructions to install the parts correctly otherwise damage may occur.
Read all instructions before installation and check to see if all parts listed are included.

KIT CONTENTS

Item#	Qty	Description
1	5	Pure Replacement Roof Light

BOLT KIT CONTENTS

None

RECOMMENDED TOOLS

Safety Tools

1. Eye Protection


Installation Tools

1. Screwdriver (Phillips head) or Torque drive

2. Pliers


REPLACEMENT ROOF LIGHT INSTALLATION INSTRUCTIONS

1 Remove existing side roof lights.

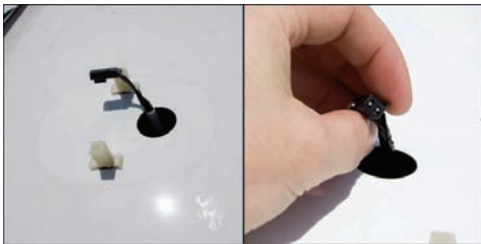

Locate the two bolts in each light and turn counter-clockwise to remove. Lift light assembly and unplug wiring. Remove light assembly completely from vehicle. Set bolts aside for later use.

2 Splice replacement light wires to factory wiring system.

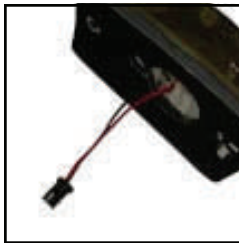

Use included connectors to attach wires leading from Pure replacement light to factory wires. Splice the black wires together. After placing wires in connector squeeze shut with pliers.

3 Test replacement light functionality.

Turn on your vehicle's lights and check the Pure Roof Light installation before continuing. If lights do not function please reverse wiring connectors used in *Step #2*.

4 Complete replacement Pure roof lights installation.



Align bolt holes in each light assembly with mounting holes in the vehicle's roof. Insert bolts removed in *Step #1* and turn clockwise to finish light replacement.

Questions? Call Putco's customer service at 1-800-247-3974

Monday – Friday, 8am – 5pm central time

216 West First Street ▪ Story City, IA ▪ 50248

www.putco.com

LIMITED WARRANTY

Putco guarantees its products against defects in workmanship and material for as long as you own your vehicle. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco. Putco is not liable for any vehicle damage resulting from the installation of our Pure Replacement Roof Lights.

LE TOIT DE REMPLACEMENT INSTRUCTIONS D'INSTALLATION LEGERES

1 Enlever les lumières de toit latérales existantes.

Localiser les deux boulons dans chaque lumière et tourner opposé-dans le sens des aiguilles d'une montre enlever. Soulever l'assemblée légère et débrancher l'installation électrique. Enlever l'assemblée légère complètement du véhicule. La série verrouille de côté pour l'usage ultérieur.

2 La lumière de remplacement d'épissure té- légraphie au système d'installation électrique.

L'usage a inclus les connecteurs d'épissure pour attacher des fils menant de la lumière de remplacement aux fils d'usine. Episser les fils noirs ensemble. Après avoir placé des fils dans le connecteur serrent fermement avec les pinces.

3 Essayer le remplacement caractère fonctionnel léger.

Allumer les lumières de votre véhicules et vérifier le Toit l'installation Légère avant de continuer.

4 Compléter le toit de remplacement allume l'in- stallation.

Aligner les trous de boulon dans chaque assemblée légère avec monter de trous dans le toit du véhicule. L'insertion verrouille enlevé dans l'Etape #1 et tourne dans le sens des aiguilles d'une montre finir le remplacement léger.



TECHE LAS INSTRUCCIONES LIGERAS DE LA INSTALACION

1 Quite existiendo las luces de techo de lado.

Localice los dos cerrojos en cada luz y la vuelta para quitar a la izquierda. Levante la asamblea ligera y quite alambrado. Quite la asamblea ligera completamente de vehículo. El conjunto cierra aparte para uso posterior.

2 La luz del reemplazo de empalme alambra al sis- tema del alambrado de la fábrica.

El uso incluyó los conectores de empalme para conectar alambres que dirigen de la luz del reemplazo a alambres de fábrica. Empalma los alambres negros juntos. Después de que colocar alambres en el estrujón del conector cierran con alicates.

3 Pruebe el reemplazo la funcionalidad ligera.

Prenda sus luces de vehículo y verifique el Techo la instalación Ligera antes de continuar.

4 Complete techo de reemplazo enciende la insta- lación.

Alinee hoyos de cerrojo en cada asamblea ligera con montar hoyos en el techo de vehículo. La adición cierra quitado en el Paso #1 y la vuelta a la derecha para terminar el reemplazo ligero.

