




## 2020-2021 L5P Duramax 4" Intake Resonator Pipe

Covers installation of PN: WCF100720



1. Disconnect the batteries.
2. Remove the factory intake tube and resonator box.

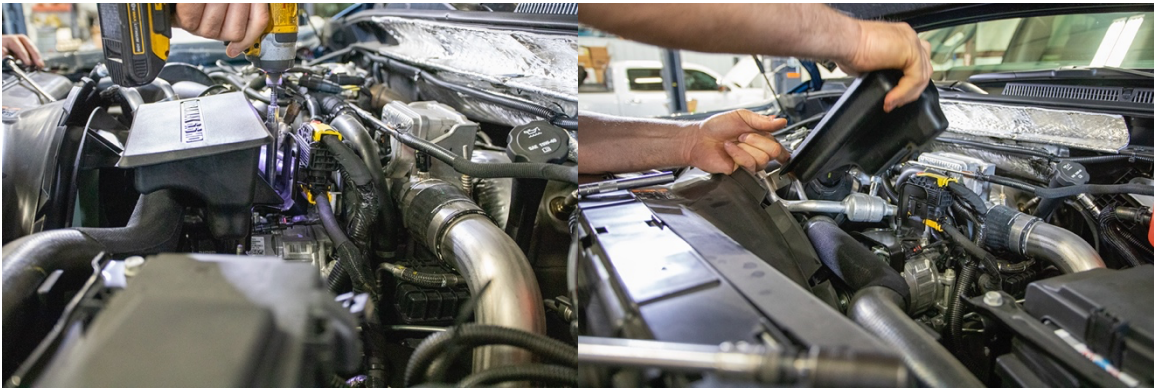


3. Unplug MAF sensor and remove 8 mm screws holding the lid onto the airbox.



4. Install the boot and clamps onto the intake horn. Do not tighten yet.



5. Install the boot and clamp to the airbox. Install to airbox outside of the truck on the bench. Use the socket to assist in pushing the nut onto the stud. This will be tight for the first install and is normal, once it has been used it will be able to easily install and remove clamp at air box for normal service and filter inspection.

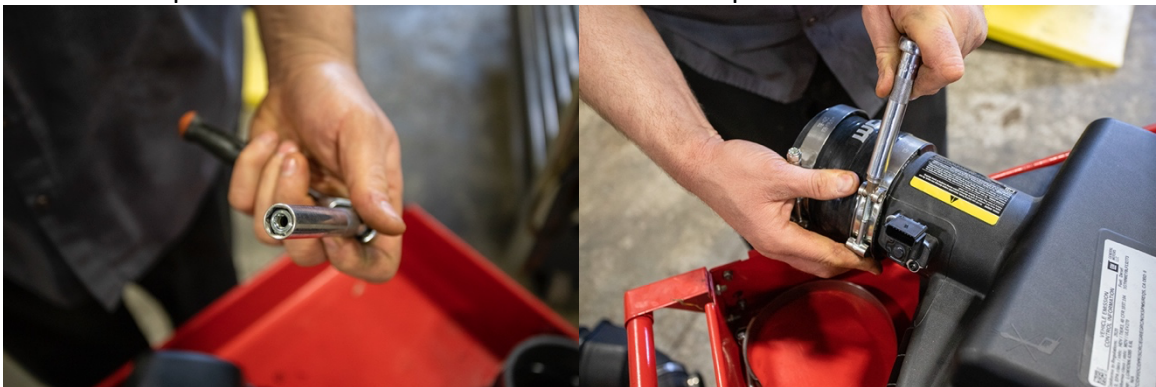

6. When finished, you should have the stud showing as pictured.



7. Loosely install the pipe into the boots. Do not tighten any clamps to allow proper alignment.



8. Install the box back onto the pipe and tighten the screws to hold the airbox lid on. Tighten all clamps evenly. Plug the MAF sensor back in.



9. Reconnect the batteries.

Any Questions, Comments, or Feedback?

Reach us by Email- [Sales@wcfab.com](mailto:Sales@wcfab.com)

Or the shop phone- 630-277-8239

Thank you for purchasing from Wehrli Custom Fabrication!