

Ranch Hitch Adapter

INSTALLATION MANUAL

For Part #3100 (straight) & #3139 (8" offset) • 24,000 lbs GTWR - 6,000 lbs Tongue

IMPORTANT! DEALER OR INSTALLER: Please make sure your customer receives this manual for safety tips, warranty, and future removal or installation information



Table of Contents

Important Safety Information	Page 2
Parts Illustration	Page 2
Tools Needed for Installation	Page 2
Section 1: Preparation	Page 3
Section 2: Installing the Base Unit	Page 3
Section 3: Attaching the Remote Latch Cable Bracket	Page 5
Section 4: Installing Quick Release & Hitch Hookup	Page 6
Warranty Information	Page 7

Want to see a video of the install?



Use your Smart Phone to scan the QR Code above and to go to our Installation Videos on the web.

Ranch Hitch Adapter

ANDERSEN 
andersenhitches.com

100%
USA
MADE  SUPPORT
USA JOBS

Contact Customer Service: 1-800-635-6106
customerservice@anderseninc.com





IMPORTANT SAFETY INFORMATION



Read the entire manual before using the Ranch Hitch Adapter to tow.

Before each trip—and regularly during a trip—check all hardware, bolts and nuts for wear and fatigue, and make sure that they are all properly tightened and secured in place.

The Ranch Hitch Adapter is NOT recommended for cushioned or movable pin boxes, only on static pin box applications. If you have a cushioned pin box you may want to use our Ultimate 5th Wheel Connection fifth wheel hitch instead.




As with any 5th wheel hitch, there is a point beyond which every trailer *will* contact the tow vehicle. Each trailer is unique, so become familiar with your specific vehicle/trailer limitations.


Because Andersen Manufacturing has no control over your trailers' pin box and frame construction, we ask you to use caution on your first towing experience with the Ranch Hitch Adapter. Be aware of what your trailer is telling you. If you are feeling undue chugging, or if you feel significant surging when stopping or starting, additional reinforcing gussets may need to be positioned in or on your pin box. A good welder will be able to shore things up, and you will be safely on your way. If you are unsure, please feel free to call us.

PARTS ILLUSTRATION – Ranch Hitch Adapter


Straight Adapter - Part #3100

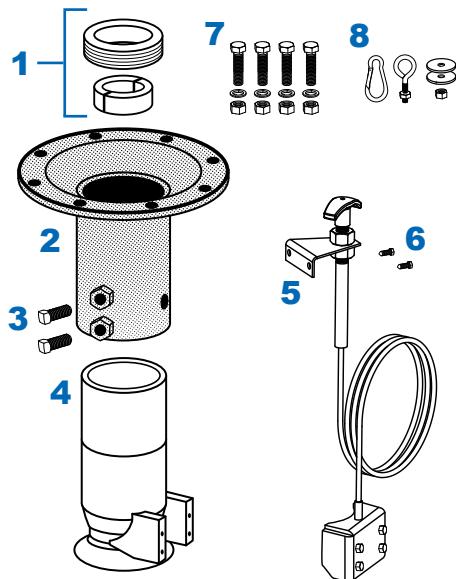

Installation Tools

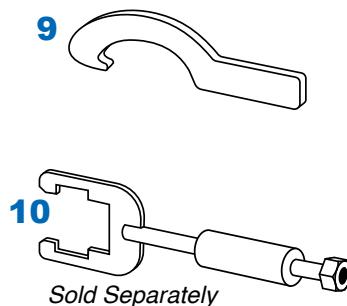

8" Offset Adapter - Part #3139

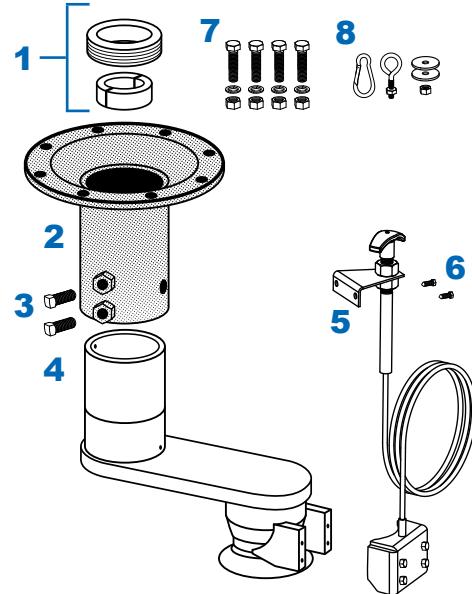

1. Threaded Collar Assembly (one threaded collar and two split collar halves) #3110

2. Ranch Hitch Adapter Base #3102

3. Set Bolts (2 pcs) #3107

4. Ranch Hitch Stinger (straight or 8" offset) #3101 or #3140

5. Remote Cable Latch and Bracket #3112

6. Self Tapping Screws (2 pcs) #3107

7. 3/4" Grade 8 Bolts with washers and nuts (4 sets) #3107

8. Safety Brake Cable Kit (quick release snap, two 1/4" flat washers, two 1/4" nuts, 1 eye bolt) #3107

9. Spanner Wrench #3104

10. Slide Hammer (optional install tool, not included in kit) #3103

Tools Needed for Installation

Anti-Seize Grease

Spanner Wrench (included)

Slide Hammer or Gear Puller

"Cheater Pipe" (1.25" IM, less than 4' long)


Electric Drill with 9/16" drill bit

3/4" Socket for grade 8 bolts

5/16" Socket for self-tapping screws

3/4" Crowfoot Socket or Socket Adapter for set bolts

Torque Wrench capable of at least 180 ft-lbs of torque

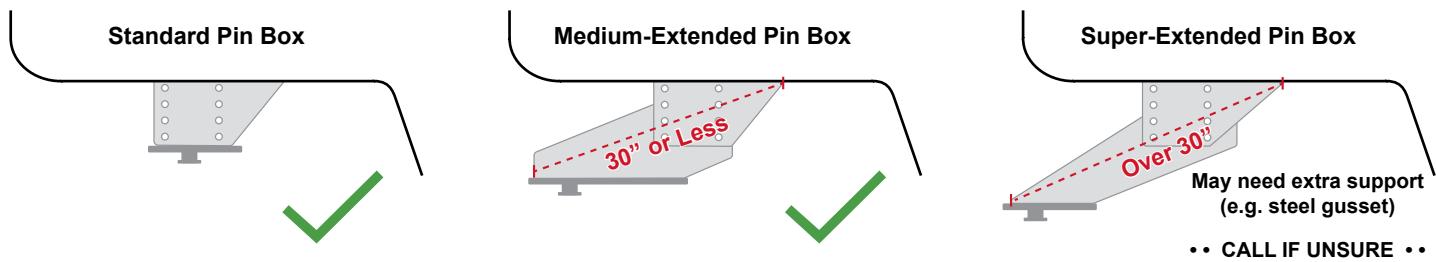

SECTION 1 : PREPARATION

Trailer Preparation


- Thoroughly inspect the trailer's pin box and frame for cracks or broken welds before installing the Ranch Hitch Adapter. Repair any problems before installation.
- On used trailers, inspect the king pin for wear and file any misshapen metal round again or the Ranch Hitch split collar will not install properly.
- If present, remove the plastic anti-friction plate as it is important that the Ranch Hitch adapter base be mounted directly to the metal of the pin box.
- Use your good judgment in determining that the Ranch Hitch Adapter and the Trailer will work together to achieve the desired results (e.g. the heavier a trailer is, the shorter or stouter your pin box should be).

1-1. Unpack the Ranch Hitch adapter box and make sure there are no missing parts by comparing items to the Parts List on page 2 in this manual. Note that the threaded collar is screwed into the black base at the factory to keep the threads from getting damaged in shipping. Contact Andersen's Customer Service Dept. If any parts are missing or damaged.

SECTION 2: INSTALLING THE BASE UNIT

2-1. Liberally apply anti-seize grease to the split collets and threaded collar (shown right) and the trailer king pin. This will make removal easier if you ever find the need.


NOTE: The threaded collar and each split collet is stamped with an 'X' on the bottom. When assembling, ensure that all 'X' marks point down because the threaded collar and split collets are tapered.

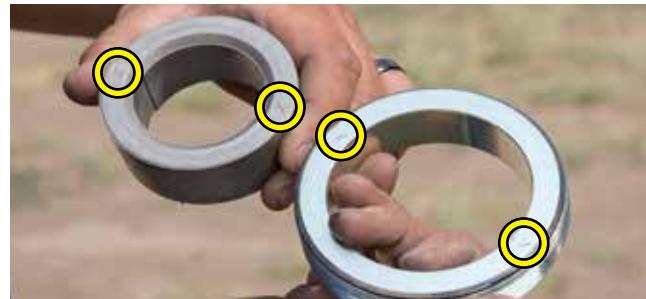

2-2. With the marked 'X' pointing down on each piece, slide the threaded collar over the king pin and, while holding the collar up, place the split collets around the narrow neck of the king pin. Slide the threaded collar down over the split collets and pull tight.



2-3. Seat the threaded collar over the split collets with enough force that it does not slide up or spin when you thread the black base onto the threaded collar. You can accomplish this by using our Slide Hammer (*sold separately, part # 3103*) or a gear puller to lightly seat the threaded collar onto the split collets. If you are using a gear puller, one full turn from finger-tight is sufficient to seat the collar and collets.

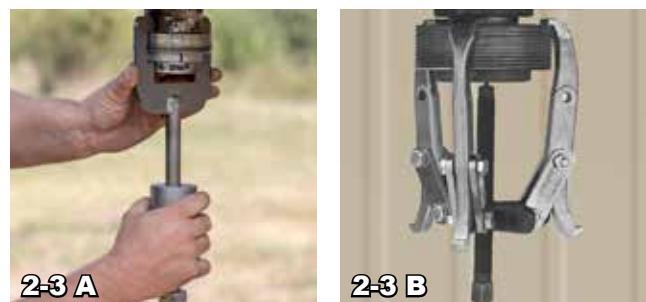

NOTE: Our Slide Hammer makes both installation AND removal of the Andersen Ranch Hitch Adapter easier.

2-4. Apply anti-seize grease to the inner threads of the Ranch Hitch Adapter base. Thread it clockwise onto the seated collar, being careful not to cross-thread the base. Spin the base onto the collar — it should spin very easily — until the base contacts the bottom of the pin box. Inspect the base/pin box contact area and make sure the two touch each other without any gaps.



2-4

2-5. Locate the spanner wrench and “cheater pipe” (not to exceed 4 ft). Insert spanner wrench into the punched hole near the bottom of the base. Place cheater pipe over spanner wrench and tighten to about 400 ft-lbs torque (this will be about as much as two men can generate by pulling together on the end of your cheater pipe). This will finish seating the threaded collar onto the split collar and ensure a very strong grip on the king pin.



2-5 A

2-6. Locate the grade 8 bolts, lock washers and nuts. There are 8 holes drilled in the Ranch Hitch Adapter Base, but only four need to be used. You will be responsible to choose which 4 holes will be used to accept the Grade 8 Bolts. Try to evenly spread the load as much as possible. Take care to locate the bolts where they will not interfere with any gusseting that might be inside the pin box. Drill the four holes using a 9/16" drill bit. Insert the bolts into each hole and secure with a lock washer and nut. Tighten to 55 ft-lbs.



2-5 B



2-6 B



2-6 A

2-7. Place the stinger into the base and lightly tighten the set bolts enough to hold the stinger in place.

◆ IMPORTANT The silver stinger tube has a scribed line about half way up the tube (See 2-7 B). **This line must NOT be visible when the stinger is in its final or lowest adjustment position in the base** or there will not be sufficient stinger material inside the base for the set bolts to engage.



2-7 A



2-7 B



2-8 A



2-8 B

SECTION 3: ATTACHING THE REMOTE LATCH CABLE BRACKET

NOTE: We suggest installing the remote latch cable bracket at the back of the pin box brackets, as shown right. If this location does not work on your trailer, make sure that the latch cable bracket is installed securely and that the cable and bracket will not come in contact with the truck side rails.



3-1. Use a 5/16" socket to install the two self-tapping screws provided.

◆ IMPORTANT The remote latch cable bracket should be installed so that the cable does not have any sharp turns or kinks in it. This allows the cable to operate correctly and prevents it from binding. For best results, we suggest installing the latch cable bracket on the opposite side of the pin box from where the cable enters the stinger.



3-1 B

3-2. Once installed, test the cable to ensure that the handle moves freely in and out. This will make sure that the pin attached to the kingpin coupler block is able to engage and disengage correctly.

Using the remote latch cable:

To engage, simply turn the handle in either direction to unlock it, push the handle until it's all the way in and then turn it fully in either direction to lock in place.

To disengage, turn the handle to unlock it, pull the handle until it's all the way out and then turn it fully in either direction to lock in place.



SECTION 4: INSTALLING QUICK RELEASE & HITCH HOOKUP

4-1. Most 5th wheel trailers are equipped with break-away brakes that need to be attached to your tow vehicle. A hardware package included with the Ranch Hitch Adapter can be used to create an attachment point. First, install the eye bolt into one of the tow vehicle's stake pockets — or location of your choice — using an existing hole or by drilling your own. Make sure you put a flat washer on each side of the hole. Place the quick release snap on the end of the break-away brake cable for easy connecting. (Do not forget to detach the cable when uncoupling the trailer from the tow vehicle.)



4-2. Make sure the Ranch Hitch Adapter coupler is open by twisting the T-handle in either direction and pulling it out. Couple the trailer and the tow vehicle together and engage the latch by pushing the T-handle in and turn it in either direction to lock it. Ensure the trailer and tow vehicle are fully coupled by lifting the trailer with its jack to assure the Ranch Hitch Adapter has locked onto the tow ball and the adapter doesn't slide off the ball. Then, connect the trailer break-away brake cable.



◇ IMPORTANT Because Andersen Manufacturing has no control over your trailers' pin box and frame construction, we would ask you to use caution on your first towing experience with the Ranch Hitch Adapter. Be aware of what your trailer is telling you. If you are feeling undue chucking, or if you feel significant surging when stopping or starting, additional reinforcing gussets may need to be positioned in or on your pin box. A good welder will be able to shore things up, and you will be safely on your way (see the support section of our website for sample). If you are unsure, please feel free to call us.

Some states require safety chains. Andersen offers heavy-duty Safety Chains (part #3109) that will fulfill this requirement.

Warranty Registration and Validation

Andersen Weight Distribution Hitch

To register your Weight Distribution Hitch, simply visit

www.AndersenHitches.com/register and complete your registration online.



Andersen Hitches Limited Warranty

PLEASE RETAIN YOUR ORIGINAL BILL OF SALE AS YOU WILL NEED TO PRESENT IT SHOULD YOU REQUIRE SERVICE UNDER THIS WARRANTY.

LIMITED LIFETIME WARRANTY: Andersen Manufacturing, Inc. (hereinafter referred to as "ANDERSEN") warrants specific Andersen brand products ("Products") purchased directly from Andersen or an Authorized Andersen Dealer, in accordance with the terms and conditions detailed herein for the periods indicated below.

⊗ WARNING: IF YOU PURCHASE AN ANDERSEN PRODUCT FROM AN UNAUTHORIZED DEALER, YOUR ANDERSEN WARRANTY WILL NOT BE VALID.

SCOPE OF WARRANTY: Commencing with the date of retail purchase and continuing for the periods specified in the Warranty Period table below, this Limited Warranty is extended to the original purchaser ("BUYER") only and warrants the Product against latent defects in materials and workmanship under normal use and service (rust, corrosion and ordinary wear and tear excepted) and is subject to the Exclusions and Limitations set forth below. A dated purchase receipt or bill of sale, or other proof of the purchase date, is required for Warranty service. If the Product is determined to be latently defective, ANDERSEN will, at its own discretion, replace or repair the Product and/or associated parts.

This Limited Warranty applies only to authentic Products manufactured and/or distributed by ANDERSEN. It does not apply to non-ANDERSEN supplied goods, even if they are packaged or sold with ANDERSEN branded Products or falsely identified as ANDERSEN Products. While some non-ANDERSEN supplied goods sold with an ANDERSEN Product may be covered by their own warranties, ANDERSEN, to the extent permitted by applicable law, provides such third-party products "AS IS".

EXCLUSIONS and LIMITATIONS: IF YOU PURCHASE AN ANDERSEN PRODUCT FROM AN UNAUTHORIZED DEALER, YOUR ANDERSEN WARRANTY WILL NOT BE VALID, please use our List of Authorized Dealers or our Authorized Dealer Locator.

BUYER is responsible for maintenance checks to the Product on a regular basis. It is also the responsibility of the BUYER to have the trailer braking system checked and maintained on a regular basis. Damages resulting from failure to perform these maintenance checks shall not be covered by this Warranty.

As the condition of trailers and vehicles used with the ANDERSEN Product is beyond ANDERSEN's control, ANDERSEN cannot and does not warrant or assume liability for damages incurred to trailers or vehicles during use of the Product.

ANDERSEN does not warrant against discontinuation of Product, defects in items or components not manufactured by ANDERSEN, or against damages resulting from use of such non-ANDERSEN made products or components. ANDERSEN passes on to BUYER the warranty it received (if any) from the maker of any non-ANDERSEN made products or components.

This Limited Warranty does not apply to any Product upon which repairs have been affected or attempted by persons other than those in possession of written authorization from ANDERSEN.

Additionally, this Limited Warranty does not apply with respect to any of the following:

1. Defects or damage resulting from improper installation, unauthorized alteration, unreasonable use, or improper maintenance including, but not limited to loading the Product beyond the Product's rated load capacity.
2. Defects or damage caused by an accident, sudden impact arising from a collision, or other abnormal occurrences.
3. Defects or damage caused by fire, smoke, flood, water damage, lightning, or other acts of nature/acts of God.
4. Defects or damage caused by abuse, misuse, negligence, accident, unauthorized product modification or service, or failure to observe the instructions contained in the manual furnished at the time of original purchase.
5. Damage caused during shipment or handling.
6. Products purchased from anyone other than ANDERSEN or an Authorized Andersen Dealer. If you are uncertain as to whether a dealer is authorized, please visit our List of Authorized Dealers or contact our Customer Service Department.
7. Products that have been altered or repaired by anyone other than ANDERSEN or an Andersen Authorized Dealer in a manner that has affected the product's performance, stability or reliability.
8. Any accessories or products attached to or used with ANDERSEN Products
9. Packing materials and cosmetic items like stickers.
10. Parts which have prescribed useful lives dependent upon the degree of their use, such as rubber pads, duffel bags, chemical products, etc.
11. Maintenance, cleaning or periodic check-ups.
12. Loss of keys to ANDERSEN's Stainless Steel Locking Pins.

THIS WARRANTY IS EXCLUSIVE. To the extent allowed by law, ANDERSEN shall not be liable for any incidental, consequential, or any other damages including, without limitation, breach of any implied warranty, merchantability, or fitness of the Product for a particular purpose. The sole and exclusive obligation of ANDERSEN shall be to repair or replace the defective Product in the manner stated above. ANDERSEN shall not have any other obligation with respect to the Product or any part thereof, whether based on contract, tort, strict liability, or otherwise. It is understood that the seller's liability, whether in contract, in tort, under any warranty, in negligence or otherwise, shall not exceed the return of the wholesale amount of the purchase price paid by the BUYER. Under no circumstances, whether based on this Limited Warranty or otherwise, shall ANDERSEN be liable for incidental, special, or consequential damages. The price stated for the Product is considered in limiting ANDERSEN's liability.

ANDERSEN's employees', representatives' or Dealers' ORAL OR WRITTEN STATEMENTS DO NOT CONSTITUTE WARRANTIES, shall not be relied upon by BUYER, and are not a part of the contract for sale or this limited warranty.

This warranty does not include labor charges nor does it include transportation charges for returning the Product to the consumer. Removal, shipping and installation of the replacement Product or replacement parts shall be at BUYER's expense.

RANCH HITCH ADAPTER WARRANTY PERIOD (from date of purchase): 1 Year

OBTAINING WARRANTY SERVICE: For warranty service and returns please visit our website and click on "Warranty" at the bottom of the page or call our customer service department at 1-800-635-6106. Select warranty claims can be submitted digitally through the help.andersenhitches.com website.

ANDERSEN HITCHES



Premier Towing Products

See our full line of towing products at
www.AndersenHitches.com



Aluminum Rapid Hitch
Greaseless & Standard
2" or 2-1/2" shank available



Ultimate Trailer Gear Super EZ Bag
for dual-axle bumper pull trailers
(additional Ultimate Trailer Gear Bags available)



EZ Adjust Hitch & EZ HD
from 10K to 16K Heavy Duty
2", 2-1/2", or 3" shank available



Camper Leveler
Level your trailer on the first try!
Each kit includes chock and leveler



Ultimate Connection 5th Wheel Hitch
Smoothest ride for 5th Wheel RV's
Connects your Kingpin to a Gooseneck ball
or standard Rails



EZ Block
Tough jack block works with post jacks,
scissor jacks, pad jacks, and more!



SUPPORT USA JOBS



Made in USA

www.AndersenHitches.com • 1.800.635.6106